

# Connecting the CoCo-80X to EDM

## There are 5 Ways to Connect CoCo-80X to EDM Software:

1. Ethernet One-to-One, with DHCP - (if using Remote Display, DHCP software is required)
2. Ethernet One-to-One, Static IP
3. Ethernet LAN, with DHCP
4. Ethernet LAN, Static IP
5. Wi-Fi

## Step 1: Establish Physical Connection

Choose Wi-Fi, Ethernet One-to-One, or Ethernet LAN

### WI-FI

1. On the CoCo-80X Setup Screen, go to **Connections**, and press **Enable Wi-Fi (F2)**
2. On the PC, go to **Wi-Fi connections**, and click on your CoCo-80X. (The network of CoCo-80X will be named as CoCo80X\_xxxxxxx with xxxxxx is the serial number of the designated unit)

### ETHERNET ONE-TO-ONE

1. Connect the CoCo-80X to the PC via an ethernet cable
2. Set IP address settings of both devices to either **Static IP** or **DHCP**

### ETHERNET LAN

1. Connect both the PC and the CoCo-80X to the same Local Area Network (LAN)
2. Set IP address settings of both devices to either **Static IP** or **DHCP**

## Step 2: Configure IP Address

When connecting via ethernet, there are two methods for handling the IP addresses: Static IP and DHCP. In the case of Static IP, the first 3 values of the IP address must be the same. The last digit must be different.

### WI-FI

1. No IP address settings for Wi-Fi connections

### STATIC IP ADDRESS

#### **Configure CoCo IP Address**

1. On the CoCo-80X Setup Screen, go to Connections
2. Disable the DHCP checkbox
3. Enter fixed IP address for CoCo
  1. The first 3 digits of the IP address must be the same. For example, if we choose the CoCo

- IP address as 192.168.22.130, then the PC IP address must be 192.168.22.xx (where 'xx' can be any number other than 130)
2. Subnet mask, Gateway, and Default DNS should be the same - Both the CoCo and PC must have the same values for these, on all 4 digits
3. Press **Apply**

### Configure PC IP Address

1. On your PC, navigate to the Network and Sharing Center TCP/IPv4 Properties
  1. On Win7, go to Control Panel > Network and Sharing Center > Ethernet > Properties > TCP/IPv4
  2. On Win10, go to Local Area Connection Properties
2. Enter fixed IP address for PC
  1. The computer and CoCo should have the same subnet mask, gateway, and DNS - but different IP addresses

### Set Interface Metric

For One-to-one connections it may be necessary to set a value for the Interface metric. From the TCP/IPv4 Properties menu, press Advanced and set a value of 10 for the Interface Metric.

### DHCP

1. On to CoCo-80X Setup Screen, go to **Connections**, and select the box for **Obtain an IP address via DHCP**
2. On your PC, go to **Connections**, and select the box for **Obtain an IP address via DHCP**

## Step 3: Connecting to EDM

1. Start up EDM CoCo Mode (DSA or VDC)
2. Press the Search button on the middle of the screen
3. Press the **Connect** button
4. Now it should be connected to EDM

From:  
<https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link:  
<https://help.go-ci.com/coco:connect-edm>

Last update: **2023/08/29 21:19**