Enabling Wi-Fi on the CoCo

The CoCo-80X has the ability to establish and create an active Wi-Fi signal. When the Wi-Fi is enabled, the CoCo-80X will broadcast its SSID with its name and serial number. Follow these steps to connect your PC to the CoCo through Wi-Fi.

1. On the CoCo, go to the main setup menu and select **Connections**.



2. Press Enable Wi-Fi or F2 to enable Wi-Fi. Press Apply.

Last update: 2024/05/21 18:28



3. On the PC, there should now be a Wi-Fi connection who's name has the CoCo's serial number.

((;	COCO-80X_4186912 Open
	Other people might be able to see info you send over this network
	Connect automatically
	Connect

4. Once connected to the network, you can now connect to the unit and download data through CoCo-DSA.

From: https://help.go-ci.com/ - **Crystal Instruments Help**

Permanent link: https://help.go-ci.com/coco:wifi

Last update: 2024/05/21 18:28