

# Enabling Wi-Fi on the CoCo

The CoCo-80X has the ability to establish and create an active Wi-Fi signal. When the Wi-Fi is enabled, the CoCo-80X will broadcast its SSID with its name and serial number. Follow these steps to connect your PC to the CoCo through Wi-Fi.


1. On the CoCo, go to the main setup menu and select **Connections**.



2. Press **Enable Wi-Fi** or **F2** to enable Wi-Fi. Press Apply.



3. On the PC, there should now be a Wi-Fi connection who's name has the CoCo's serial number.

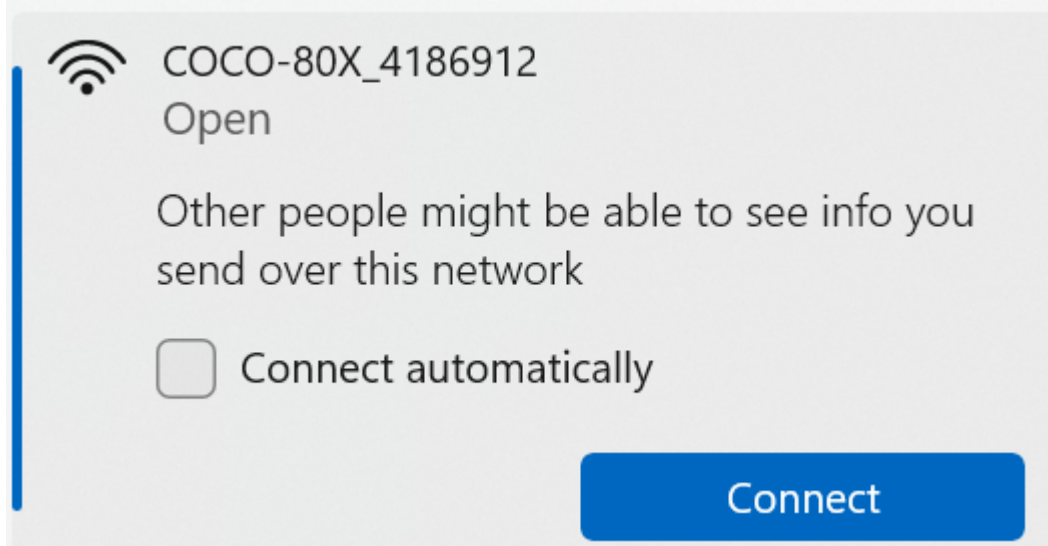

4. Once connected to the network, you can now connect to the unit and download data through CoCo-DSA.

From:  
<https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link:  
<https://help.go-ci.com/coco:wifi>

Last update: **2024/05/21 18:28**