


Stability Diagram

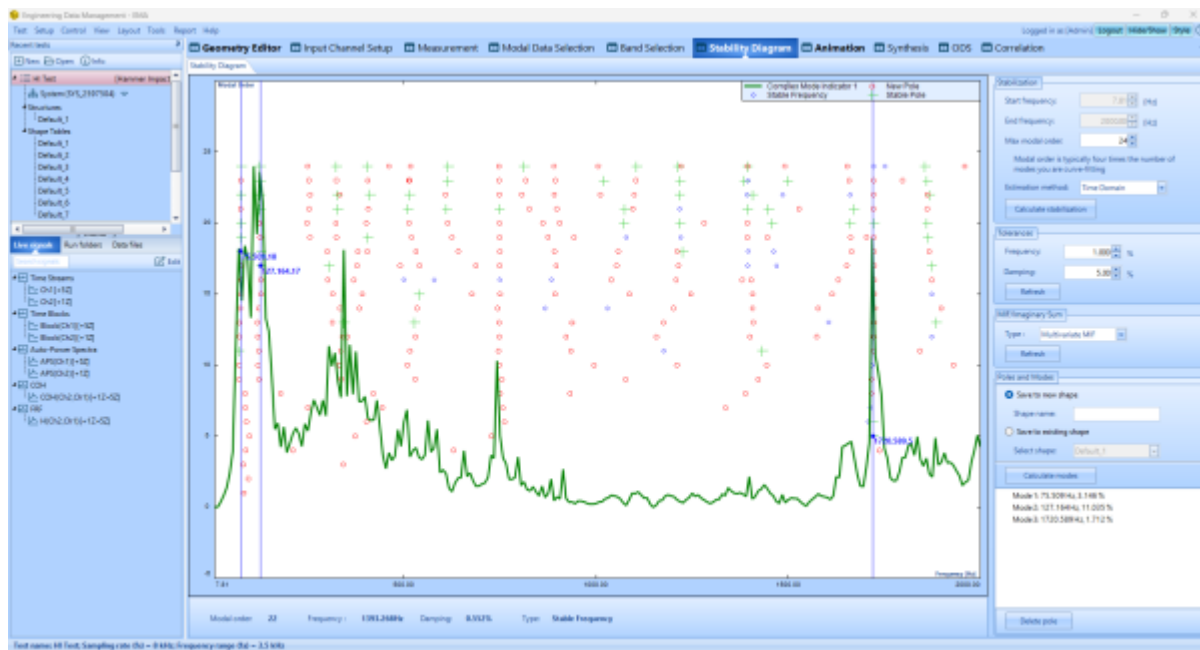

The Stability Diagram tab features a configurable plot with parameter control over the modal order, estimation method, MIF type, and pole selection.

From:

<https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link:

<https://help.go-ci.com/modal:modal-analysis:stability-diagram?rev=1788549644>

Last update: **2026/09/04 19:20**