


Stability Diagram

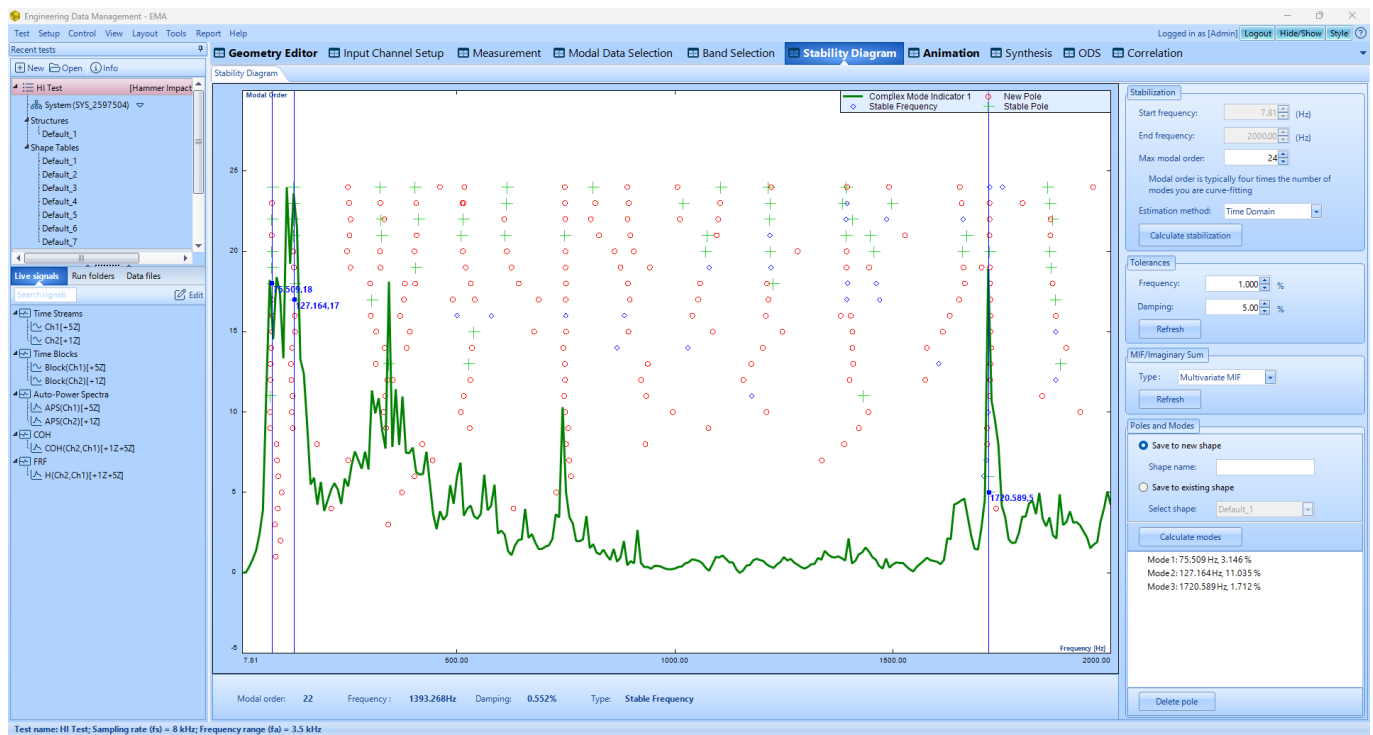

The Stability Diagram tab features a configurable plot with parameter control over the modal order, estimation method, Mode Indicator Function type, and pole selection.

Modal Order and Estimation Method

From:
<https://help.go-ci.com/> - Crystal Instruments Help

Permanent link:
<https://help.go-ci.com/modal:modal-analysis:stability-diagram?rev=1788549816>

Last update: 2026/09/04 19:23