


Moving and Zooming around in the Signal Display Traces

Each signal trace on a signal display page can be moved and zoomed around.

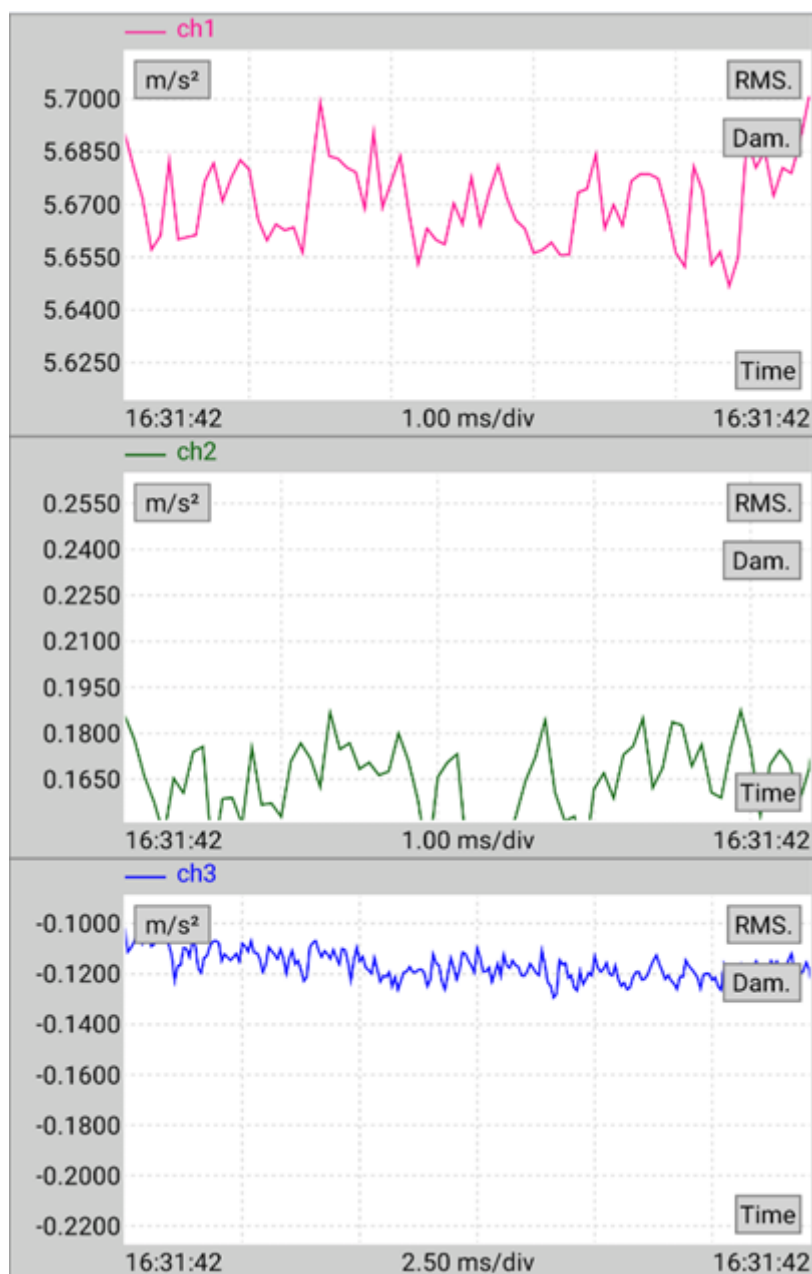

There are two ways to control the axis ranges:

- Zooming in and out via two fingers by pinching or expanding
- Tapping on the **X or Y axis** to set Auto range or a specific range

< Display Range

X-Axis Display Range

Auto X Range



X Axis Min

0.00000000

X Axis Max

0.01593750

Y-Axis Display Range

Auto Y Range



Y Axis Min

-0.19813072

Y Axis Max

-0.16006987

From:

<https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link:

https://help.go-ci.com/ruby:quickguide:moving_and_zooming_around_in_the_signal_display_traces?rev=1749145369

Last update: **2025/06/05 17:42**