


# Moving and Zooming around in the Signal Display Traces

Each signal trace on a signal display page can be moved and zoomed around.

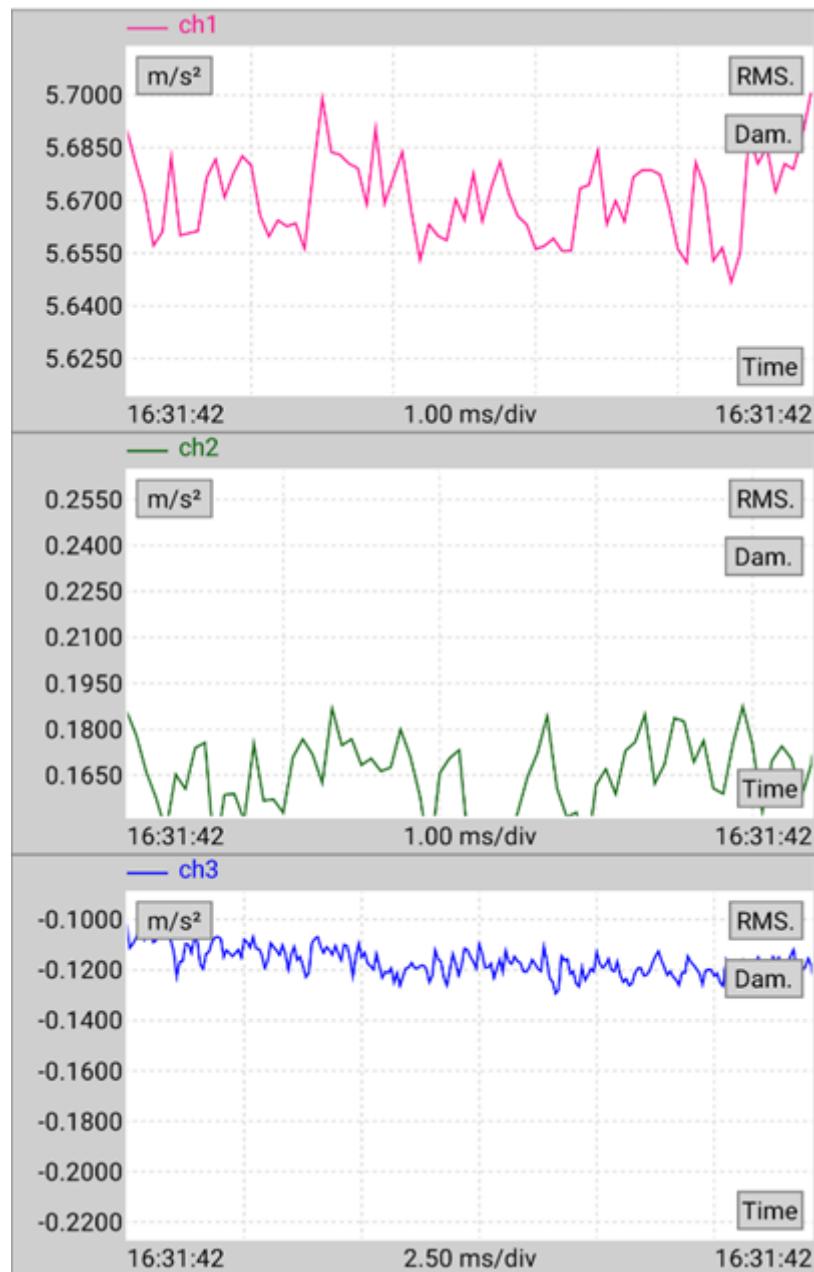

There are two ways to control the axis ranges:

- Zooming in and out via two fingers by pinching or expanding
- Tapping on the **X or Y axis** to set Auto range or a specific range

## < Display Range

### X-Axis Display Range

Auto X Range

X Axis Min 0.00000000

X Axis Max 0.01593750

### Y-Axis Display Range

Auto Y Range

Y Axis Min -0.19813072

Y Axis Max -0.16006987

From:

<https://help.go-ci.com/> - Crystal Instruments Help

Permanent link:

[https://help.go-ci.com/ruby:quickguide:moving\\_and\\_zooming\\_around\\_in\\_the\\_signal\\_display\\_traces?rev=1749145369](https://help.go-ci.com/ruby:quickguide:moving_and_zooming_around_in_the_signal_display_traces?rev=1749145369)

Last update: **2025/06/05 17:42**