

Real Time RMS


The **Real Time RMS** page can be accessed by connecting to a Ruby via Bluetooth.

There are two displays:

- Numeric Display
- Signal Display

The numeric display loads first upon entering the page. The signal display can be accessed by starting the data acquisition via the **Signal Display** button in the lower left corner.



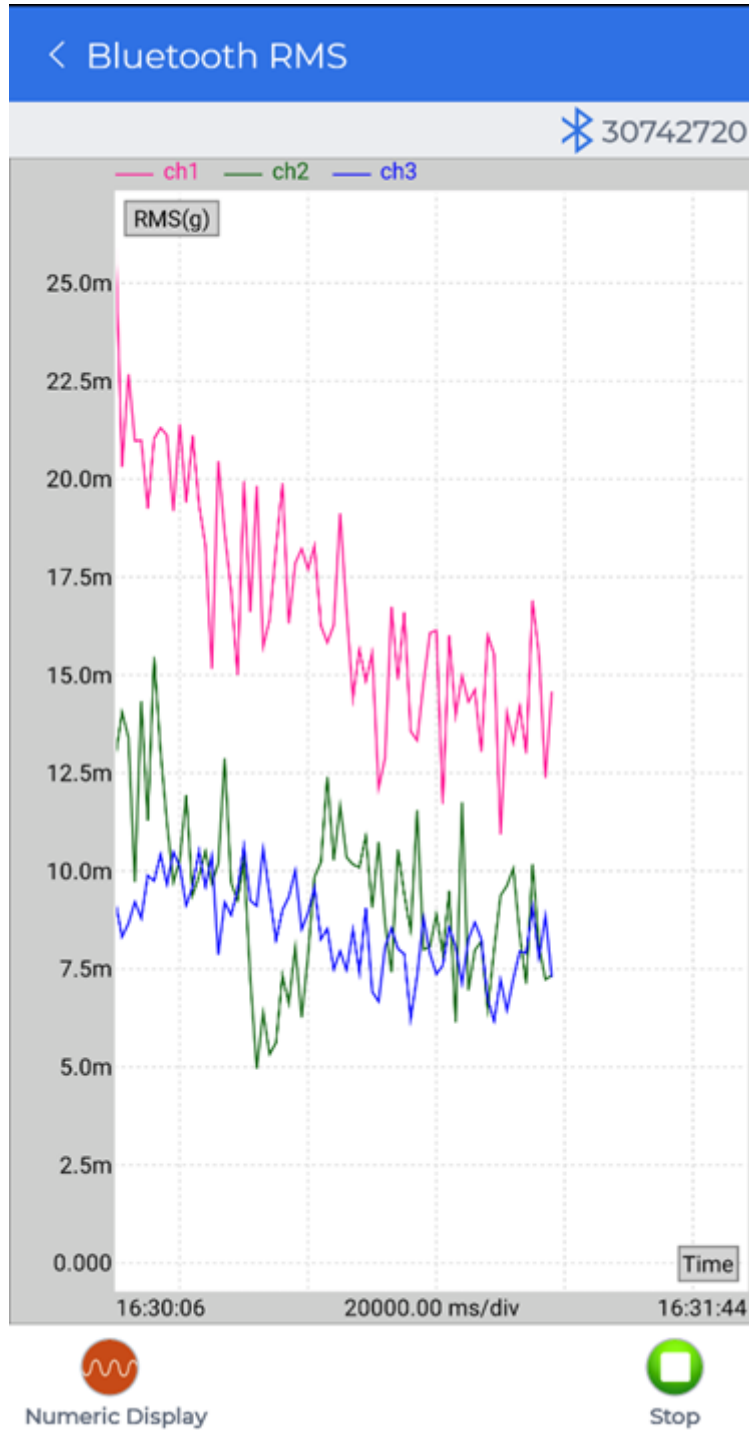

For more details on how to move and zoom around in the signal display, see [Moving and Zooming around in the Signal Display Traces](#) or [Navigating Signal Display Controls](#).

From: <https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link: https://help.go-ci.com/ruby:real_time_rms

Last update: **2025/06/05 17:58**