

VCS Random Testing

Create New Test

Test Configuration

Input Channels

Channel Type

Control vs. **Monitor**. When running a test, there will need to be at least one control sensor. The control sensor is used to monitor the actual vibration levels that the shaker is producing. It then sends this data to the controller so that it maintains the targeted profile. This sensor should be mounted somewhere on the shaker/slip table itself, not the Device Under Test (DUT). Monitor sensors will show the levels that the DUT itself is experiencing.

Measurement Quantity

Select the type of quantity that the sensor is reading. For accelerometers this will be acceleration.

Sensitivity

This is the output sensitivity of the sensor. This value states how many mV the sensor outputs per engineering unit of measurement. In most accelerometer cases this value will be in mV/g and can be found with the sensor.

Input Mode

This is how the sensor obtains its power.

Running the Test

From:
<https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link:
<https://help.go-ci.com/vcs:random?rev=1714423699>

Last update: **2024/04/29 20:48**