


VDS Measurement Entries

Pick Up

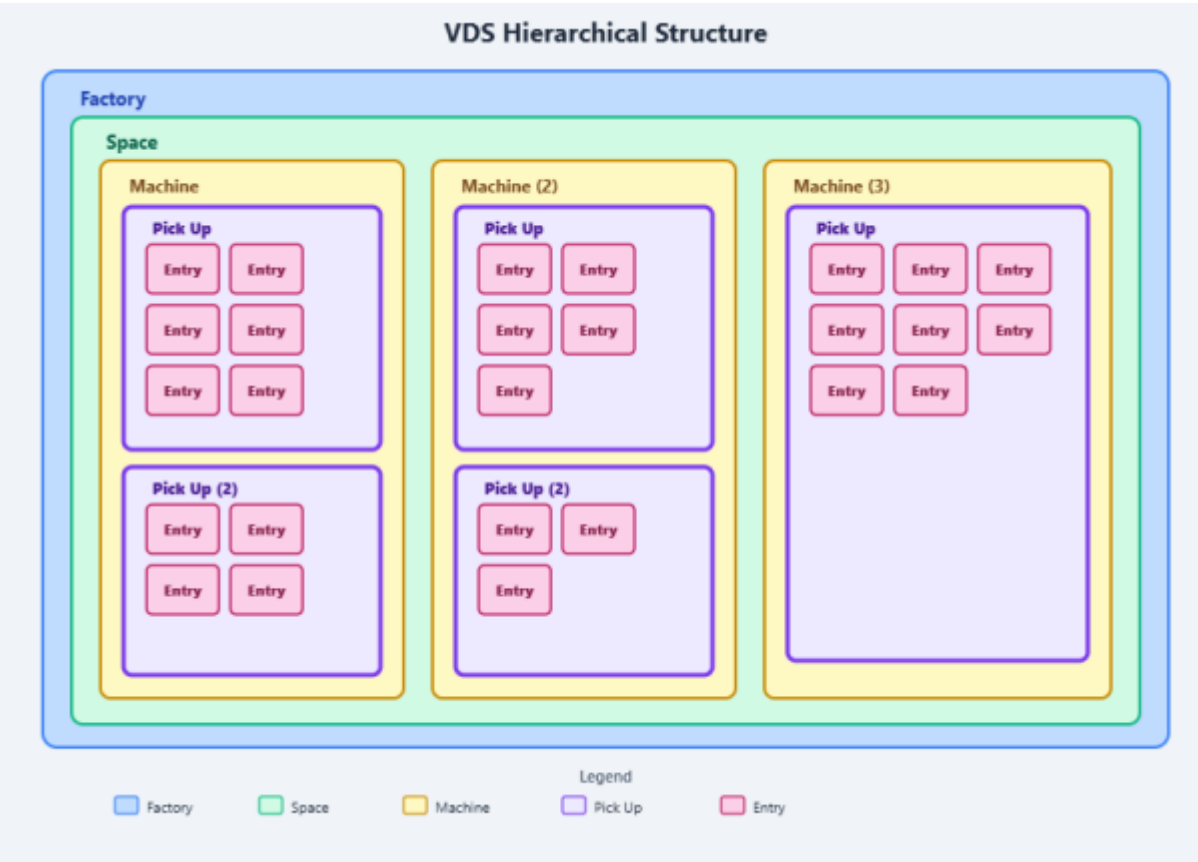

Pick Ups are found under the machine class in the hierarchical structure of a Factory

Machine

Name: Demo Unit 1B

Short Name: 1B

Description:

S/N:

Space:

Location:

No Machine Class

Select a Machine GroupVDS

Machine Class

Data Collector

Time and Schedule

Notes

Test Condition

Select a Machine ClassDemo 1

Points

Alias

Speed

Select/Deselect the Points to set up for this machine


Name	Select
Pick Up #1	☒
Pick Up #4	☒
Pick Up #3	☒

OK

Cancel

Defined by a physical data collection location on a machine in your factory

Can be directly tied to an element in a machine class through the machine builder

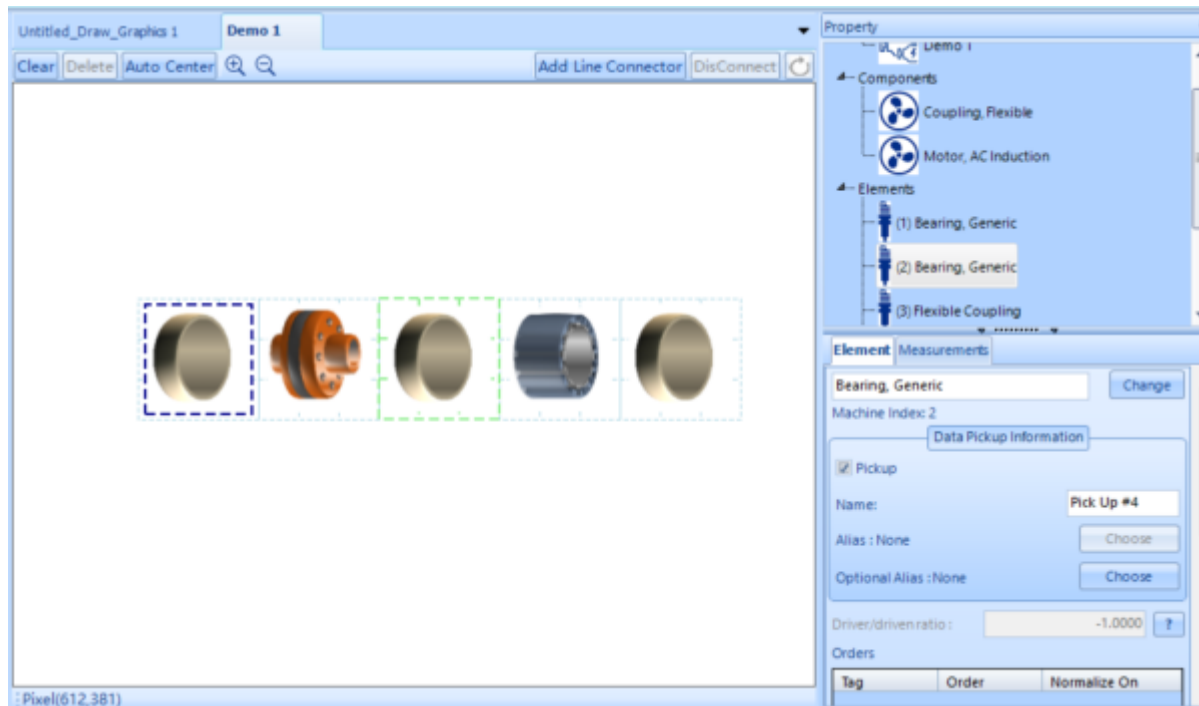


Diagnostic information such as fixed thresholds and baselines are tied to pick up points.

Baselines and Fixed Thresholds are created through the data explorer by selecting the pick up point or parent machine in the asset explorer, tabbing over to Machine Class and then right clicking the pick up to build the data analysis feature.

[baseline.mp4](#) (
)

Entry

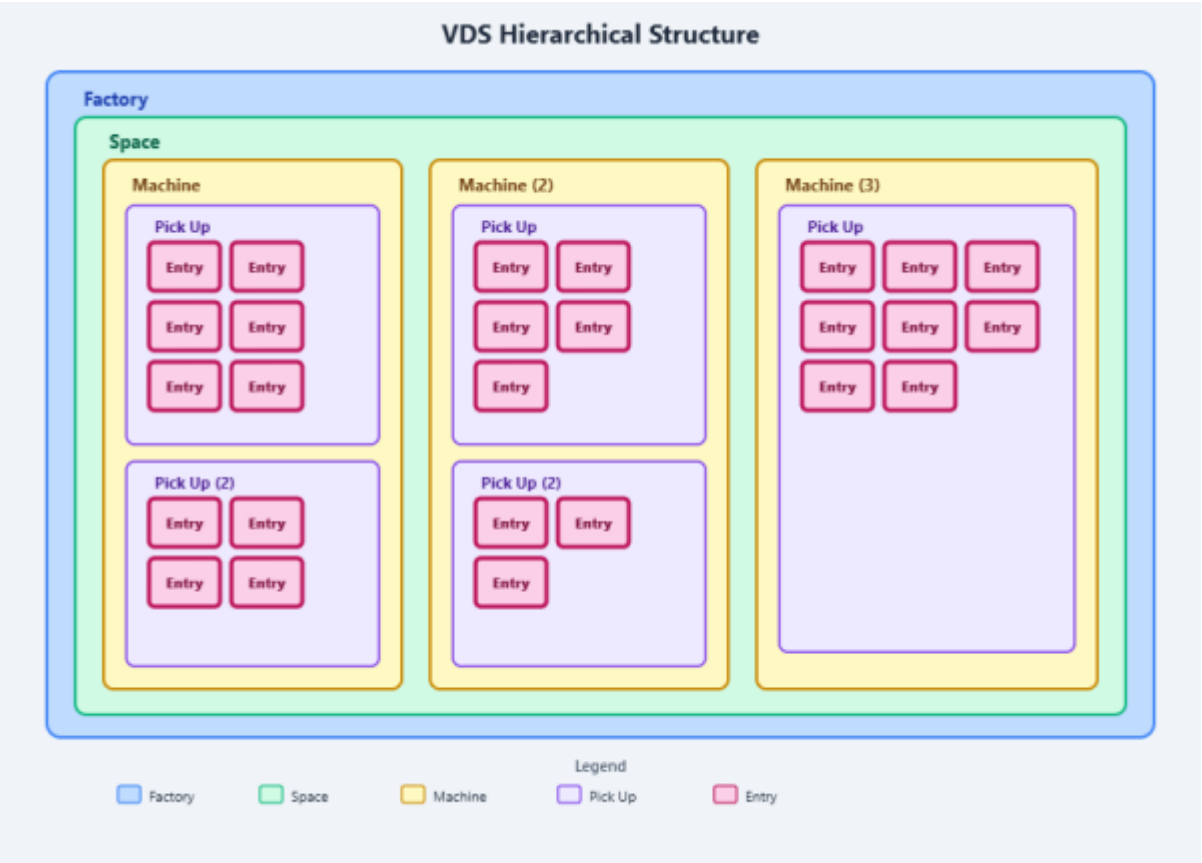

From:
<https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link:
<https://help.go-ci.com/vds:entries?rev=1782159812>

Last update: **2026/06/22 20:23**