



VDS Measurement Entries

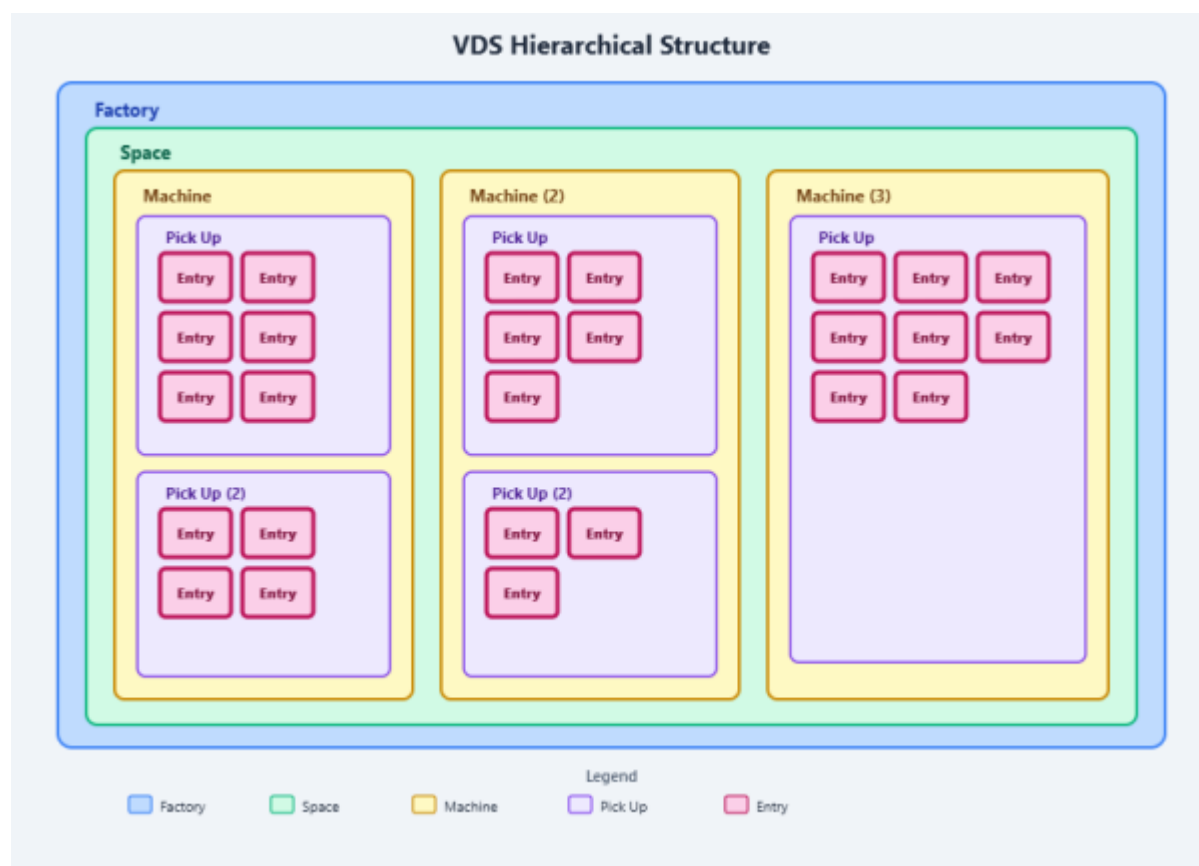

Entries are found under the pickup point in the hierarchical structure of the factory; they track to a specific measurement taken on the route

Entry Creation

New Entries can be created by going to the setup tab and finding New Entry on the Project Panel; in order to create an entry, you need to be selecting a Point or Entry in the asset explorer.

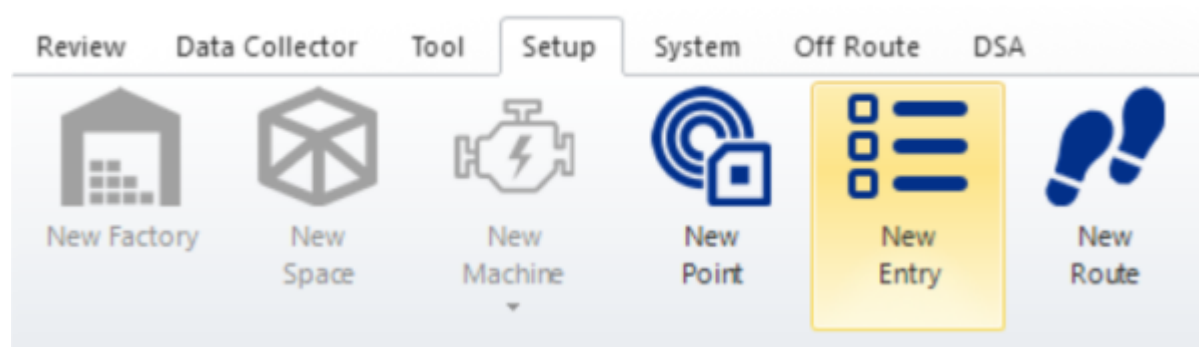

Orientation

enable alarm enable tachometer

Parameter

Sensor

Data

From:

<https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link:

<https://help.go-ci.com/vds:entries?rev=1782161538>

Last update: **2026/06/22 20:52**