


Stability Diagram

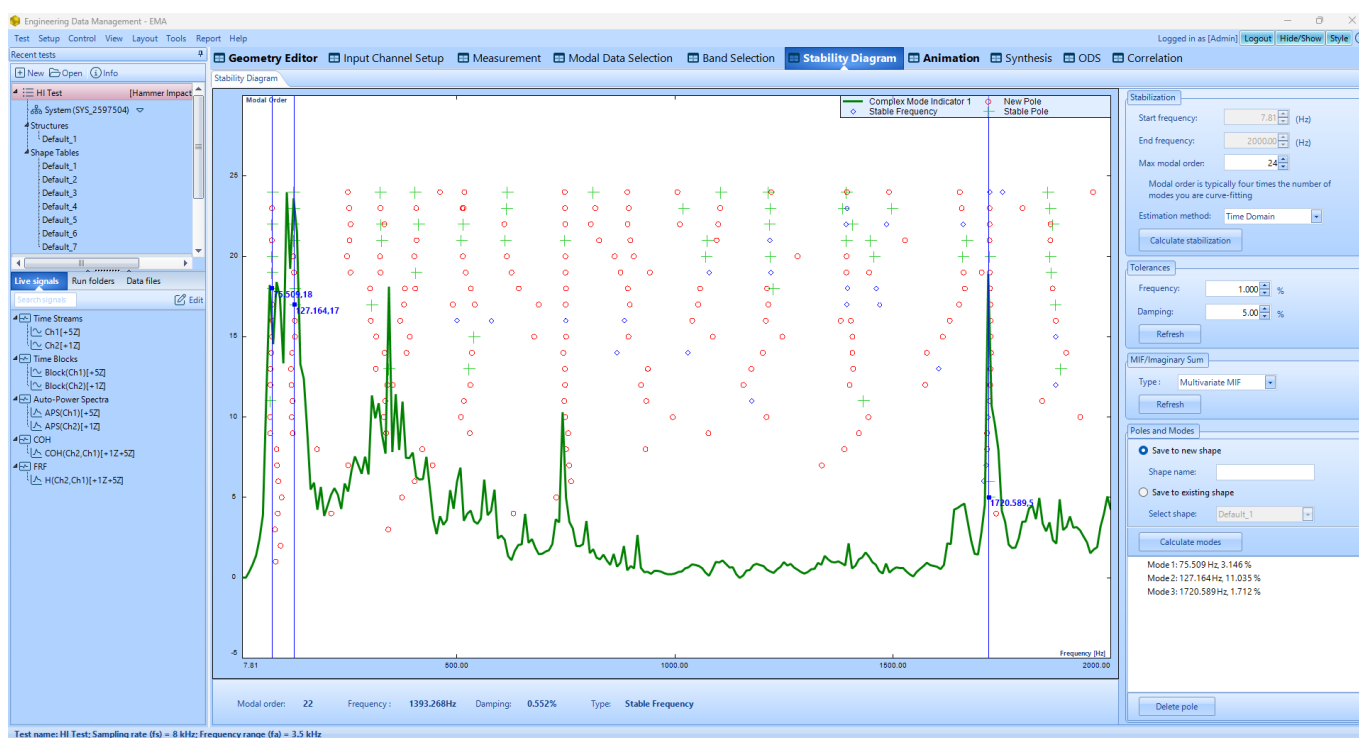

The Stability Diagram tab features a configurable plot with parameter control over the modal order, estimation method, Mode Indicator Function type, and pole selection. It also displays Pole information for modal order frequency and damping ratio. Selected poles are used in mode calculation.

Modal Order and Estimation Method

The modal order is a user defined number which is used to determine the order of the polynomial curve of best fit.

From:
<https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link:
<https://help.go-ci.com/modal:modal-analysis:stability-diagram>

Last update: **2026/09/04 19:57**