
Stability Diagram

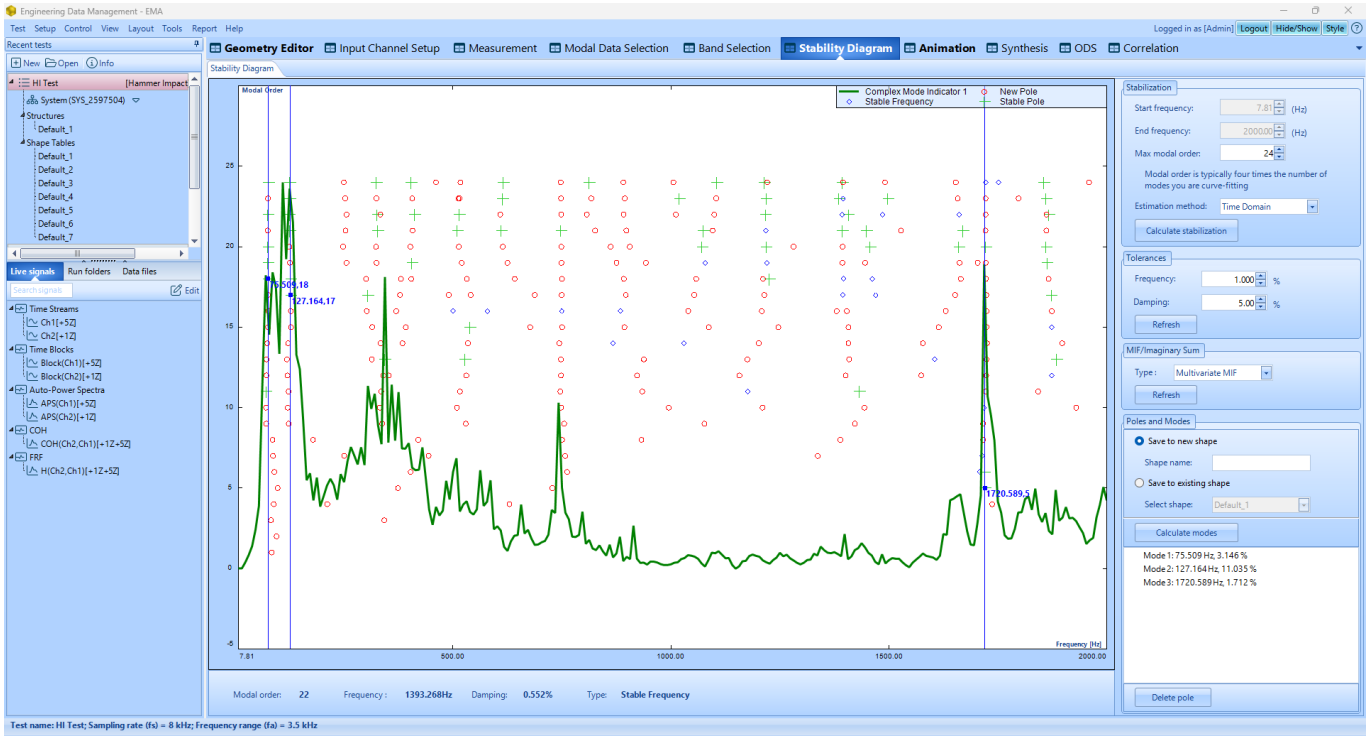

The Stability Diagram tab features a configurable plot with parameter control over the modal order, estimation method, Mode Indicator Function type, and pole selection.

Modal Order and Estimation Method

From:
https://help.go-ci.com/ - **Crystal Instruments Help**

Permanent link:
https://help.go-ci.com/modal:modal-analysis:stability-diagram?rev=1788549816

Last update: **2026/09/04 19:23**