Real Time RMS


The **Real Time RMS** page can be accessed by connecting to a Ruby via Bluetooth.

There are two displays:

- Numeric Display
- Signal Display

The numeric display loads first upon entering the page. The signal display can be accessed by starting the data acquisition via the **Signal Display** button in the lower left corner.



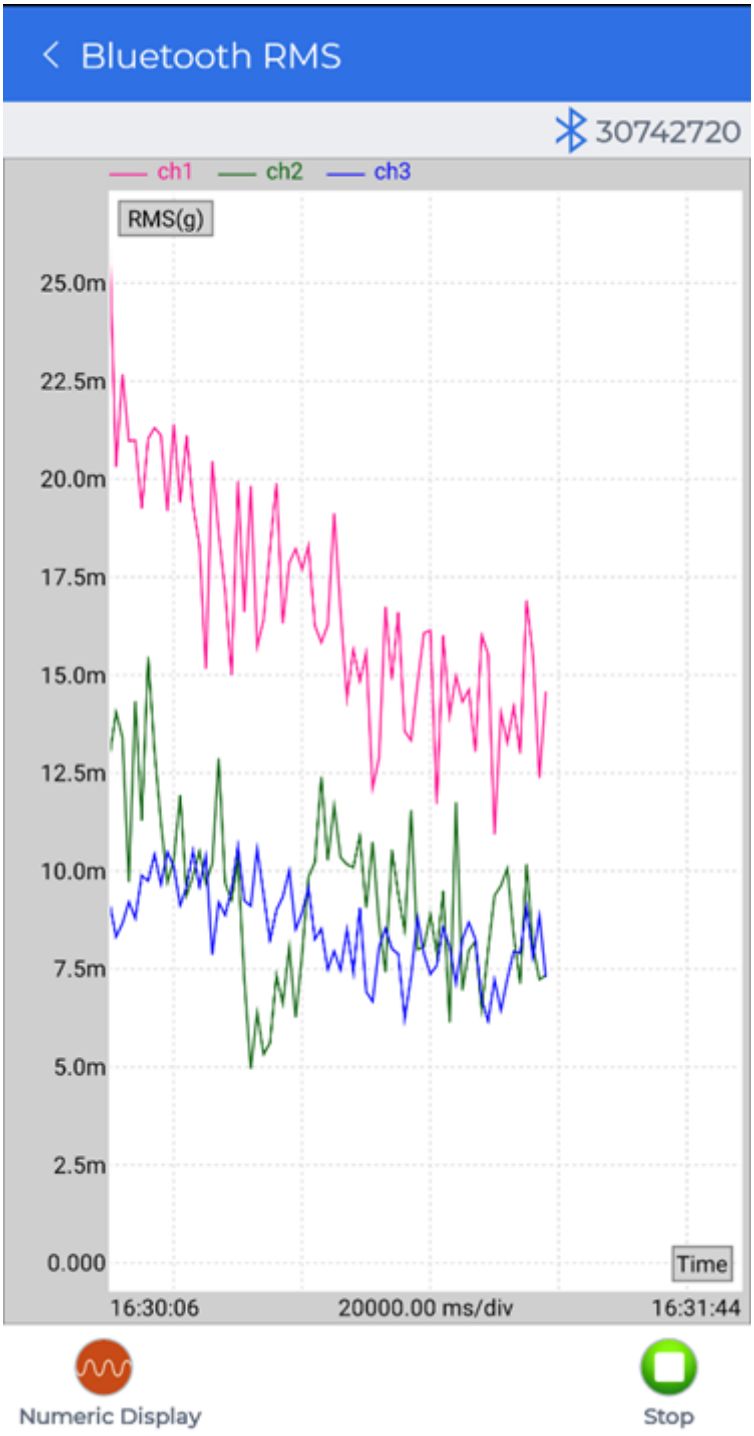

For more details on how to move and zoom around in the signal display, see Moving and Zooming around in the Signal Display Traces or Navigating Signal Display Controls.

From:
https://help.go-ci.com/ - **Crystal Instruments Help**

Permanent link:
https://help.go-ci.com/ruby:real_time_rms

Last update: **2025/06/05 17:58**