

VDS Machine Builder

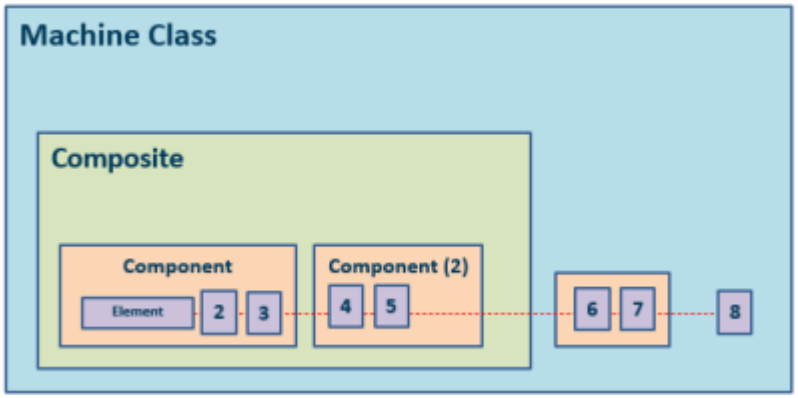

Machine Structure

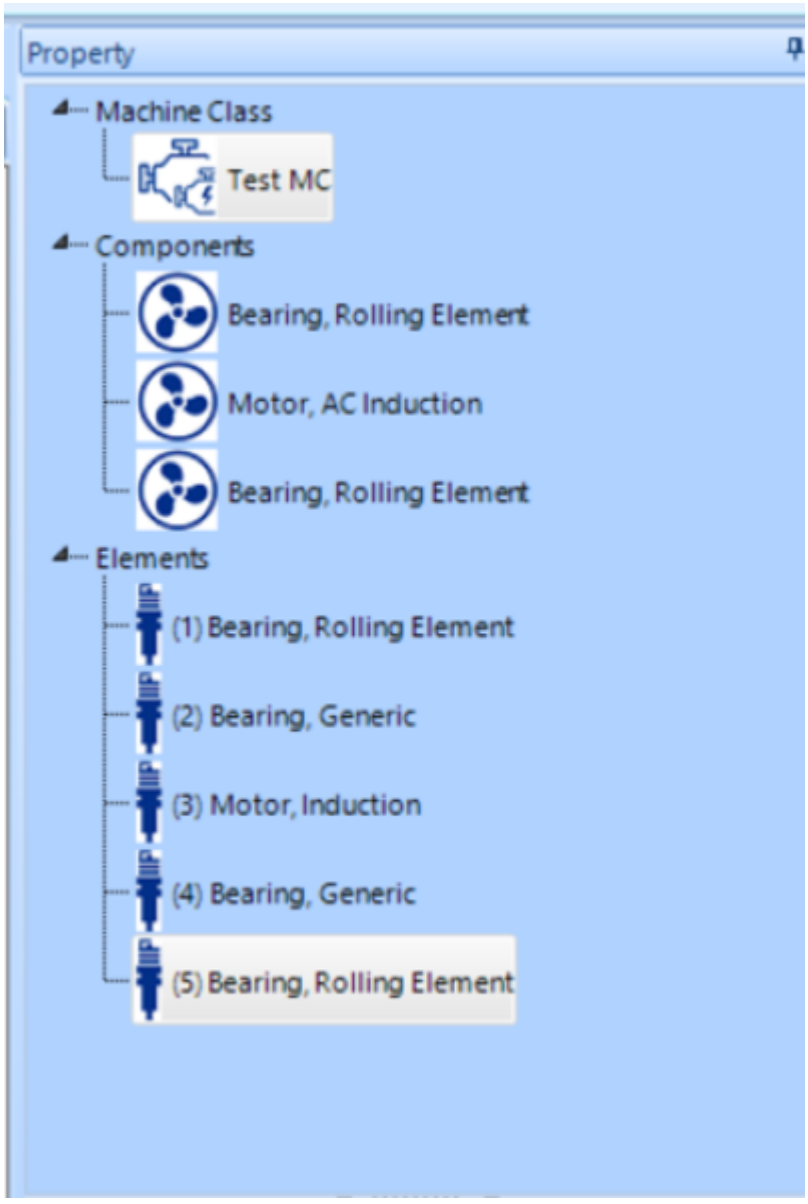

Machine Class: ** The machine class represents the full model of the machine. Includes


RPM and speed variation information. Automated diagnostics are run at the machine class level


****Composites: ** composites are composed of several components and are used for inter-component issues i.e. pulleys and gear compressors.**


****Components:** collection of elements on a single shaft

Elements: a mechanical part i.e. bearings, fans, and motors


Machine Construction

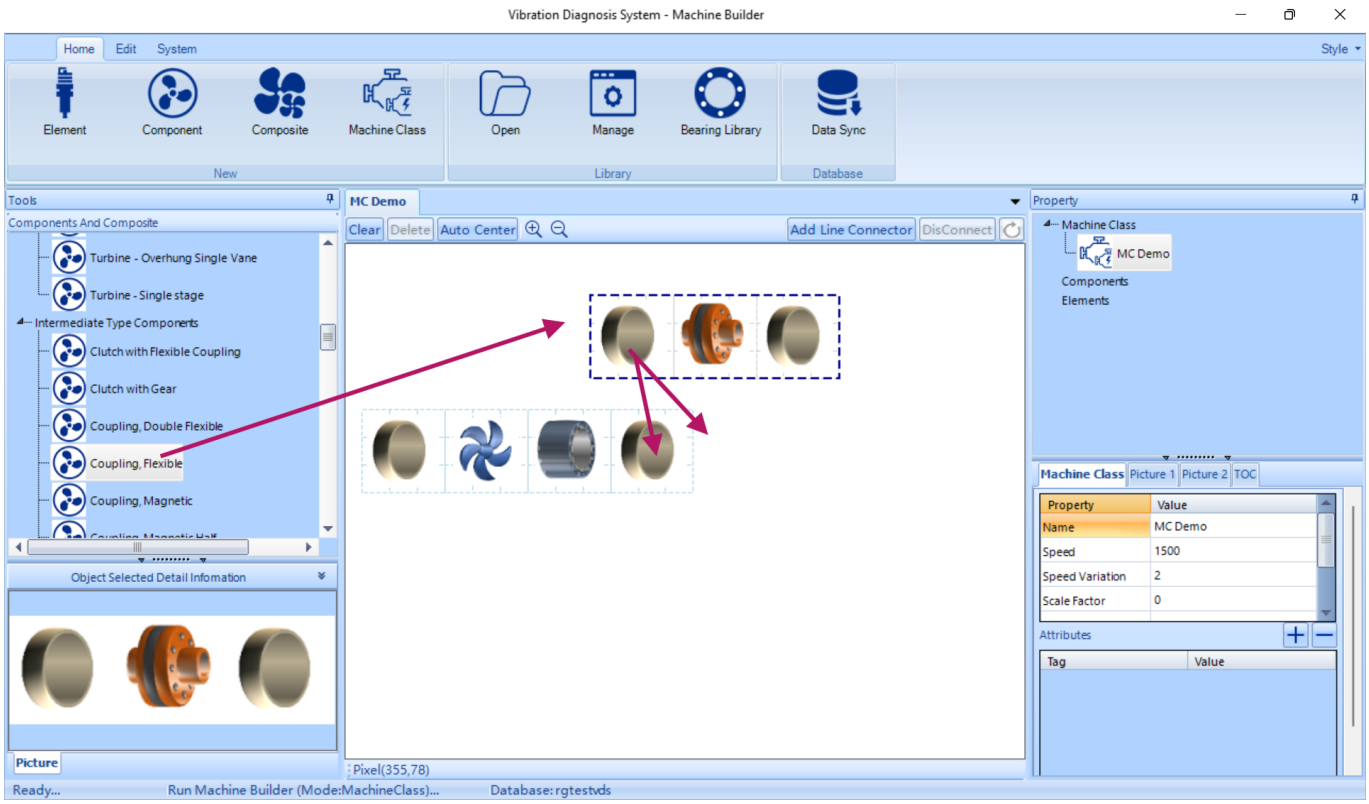

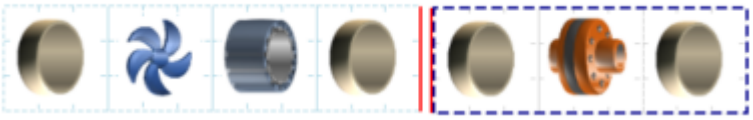


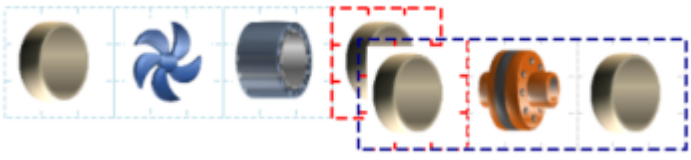

Component and element features can be edited by selecting either the component or sub element in the demo window or property selection. To select an element in the demo window 1st click on the part to select the component then click again to enter element selection.

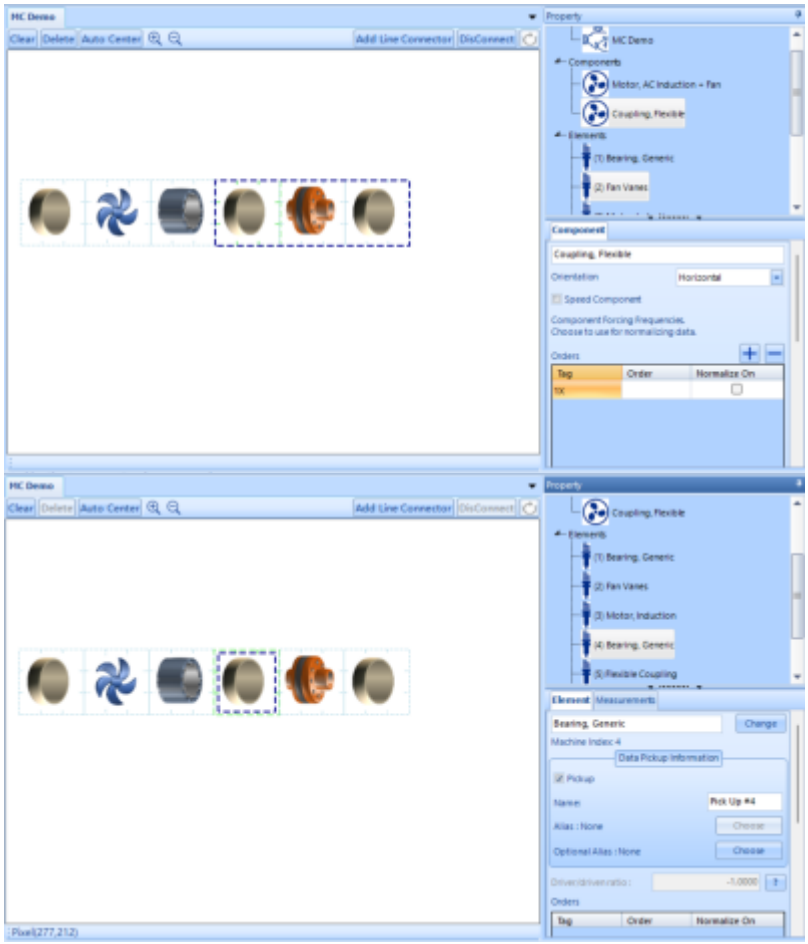

Component settings allows oyu to set the speed component.

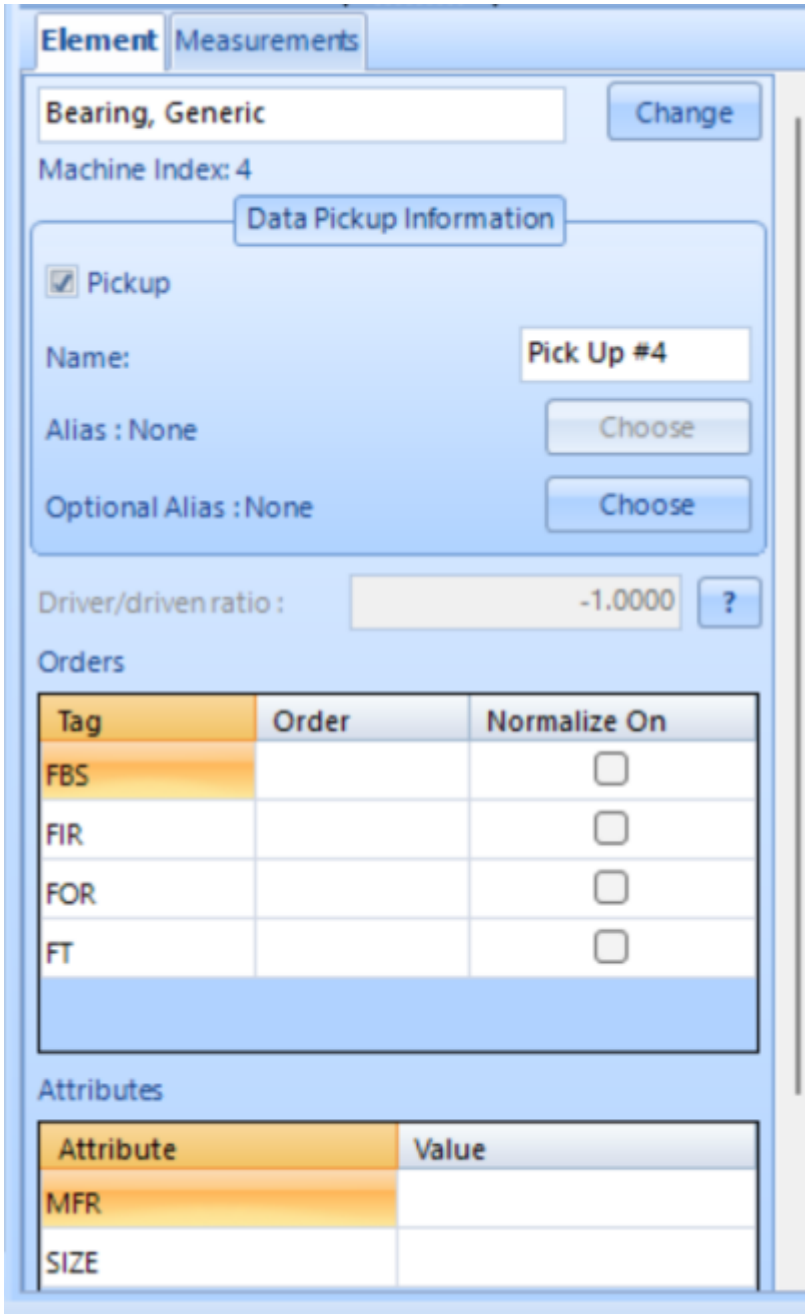

Element settings allows for you to select if the element is a pickup point and adjust diagnostic features as well as input information such as forcing orders and pole count.

From:
https://help.go-ci.com/ - **Crystal Instruments Help**

Permanent link:
https://help.go-ci.com/vds:machinebuilder?rev=1782419759

Last update: **2026/06/25 20:35**