
## Changing the Ruby Connection Mode to USB, Bluetooth or ISA100

To change the Ruby device connection mode while it is connected to the Ruby mobile app, go to **Device** > **Mode**.

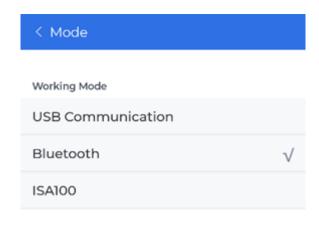



Select the desired connection mode to switch the Ruby to and tap **Apply**.

The Ruby will immediately switch modes and disconnect from the mobile app.

From:

https://help.go-ci.com/ - Crystal Instruments Help

Permanent link:

https://help.go-ci.com/ruby:quickguide:changing\_the\_ruby\_connection\_mode\_to\_usb\_bluetooth\_or\_isa100

Last update: 2025/06/05 15:57