


Changing the Ruby Connection Mode to USB, Bluetooth or ISA100

To change the Ruby device connection mode while it is connected to the Ruby mobile app, go to **Device > Mode**.

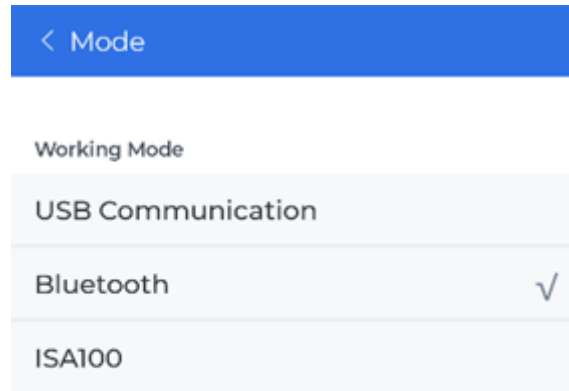

Apply

Select the desired connection mode to switch the Ruby to and tap **Apply**.

The Ruby will immediately switch modes and disconnect from the mobile app.

From:
<https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link:
https://help.go-ci.com/ruby:quickguide:changing_the_ruby_connection_mode_to_usb_bluetooth_or_isa100

Last update: **2025/06/05 15:57**