


# Downloading Files from the Ruby to RCM

To transfer locally downloaded files from the phone to RCM, follow the instructions on the **Transfer to RCM** page.

Turning the **Enable Transfer** option on will automatically set the IP address from the Wi-Fi connected to the phone.

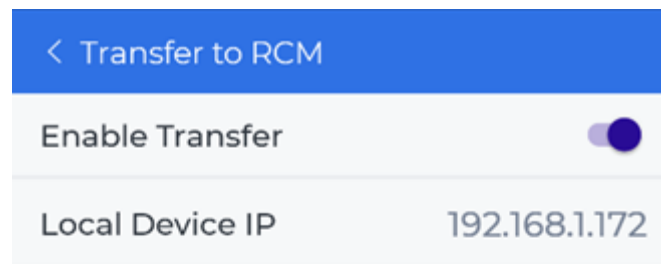


This function is used to transfer the local file data of the App to the RCM software. The steps are as follows.


1. Keep App and RCM software on the same LAN.
2. Enable transfer function on App and waiting for connection by RCM software.
3. Open RCM software on PC and find "Tools -> Download from Ruby Mobile App" menu.
4. Enter the local device IP and click "Connect" button to connect App in RCM software.

The phone does not need to be connected to the PC via a USB cable.

Open RCM and navigate to **Tools > Download from Ruby Mobile App**.

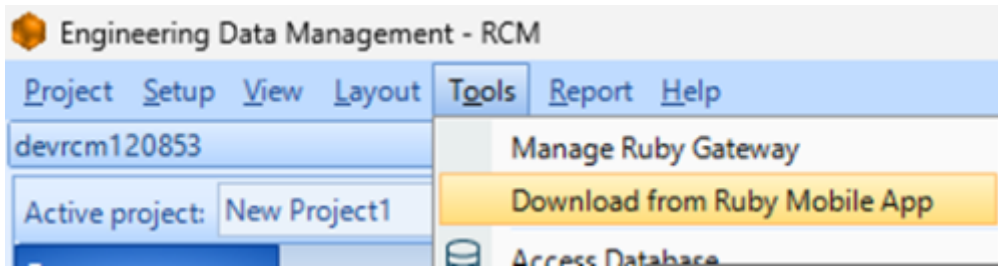


Type in the phone's IP address then click **Connect**.

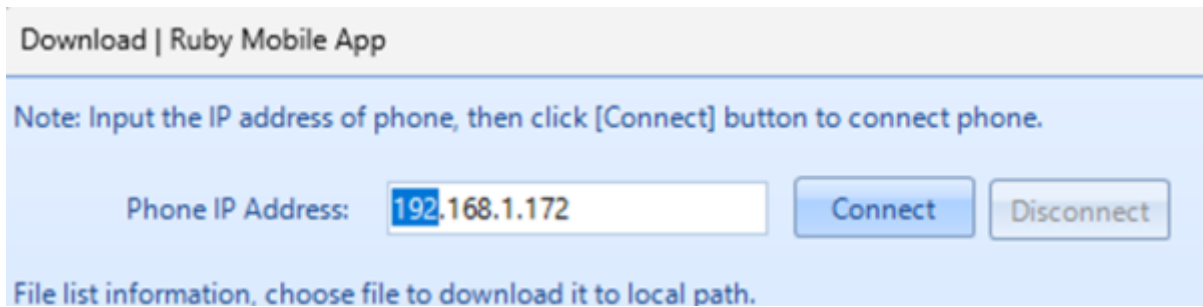

Eventually the ruby mobile app should display the following image to indicate the phone is connected to RCM.

If the phone does not connect, then change the PC Wi-Fi adapter or the phone's IP address to match each other with 192.168.1.xxx.

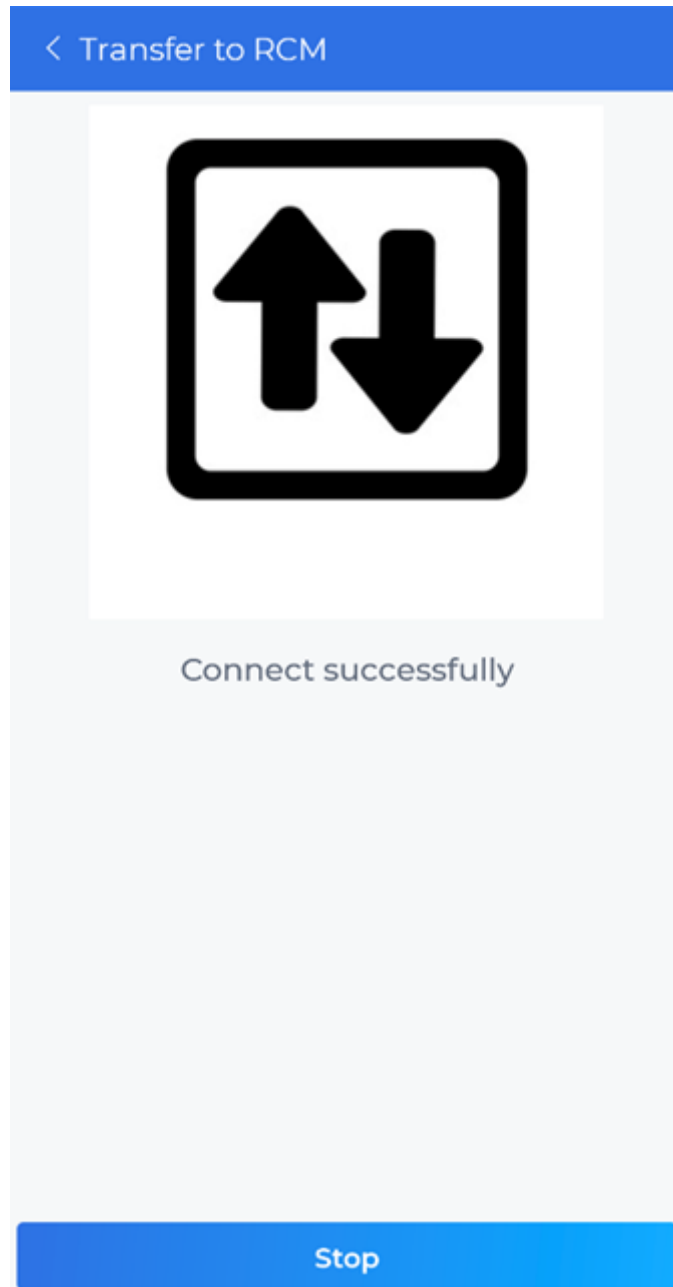

Once connected, RCM can grab the list of files on the phone and download them to RCM.

Download | Ruby Mobile App X

Note: Input the IP address of phone, then click [Connect] button to connect phone.

Phone IP Address:

File list information, choose file to download it to local path.

File name	Size	Create time	Ruby serial number
REC0026_20250425183105.wdat	12.3KB	2025-4-25 18:31:5	30742720
SIG0006_20250424230722.wdat	6.3KB	2025-4-24 23:7:22	30742720
SIG0020_20250328120303.wdat	6.3KB	2025-3-28 12:3:3	30741760
SIG0019_20250328110302.wdat	6.3KB	2025-3-28 11:3:2	30741760
SIG0018_20250328100301.wdat	6.3KB	2025-3-28 10:3:1	30741760
SIG0017_20250328090300.wdat	6.3KB	2025-3-28 9:3:0	30741760
SIG0016_20250328080259.wdat	6.3KB	2025-3-28 8:2:59	30741760
SIG0015_20250328070300.wdat	6.3KB	2025-3-28 7:3:0	30741760
SIG0014_20250328060257.wdat	6.3KB	2025-3-28 6:2:57	30741760
SIG0013_20250328050256.wdat	6.3KB	2025-3-28 5:2:56	30741760
SIG0012_20250328040255.wdat	6.3KB	2025-3-28 4:2:55	30741760
SIG0011_20250328030254.wdat	6.3KB	2025-3-28 3:2:54	30741760
SIG0010_20250328020253.wdat	6.3KB	2025-3-28 2:2:53	30741760
SIG0007_20250327230251.wdat	6.3KB	2025-3-27 23:2:51	30741760
SIG0006_20250327220254.wdat	6.3KB	2025-3-27 22:2:54	30741760
SIG0005_20250327210258.wdat	6.3KB	2025-3-27 21:2:58	30741760
SIG0004_20250327210248.wdat	6.3KB	2025-3-27 21:2:48	30741760
SIG0003_20250327200247.wdat	6.3KB	2025-3-27 20:2:47	30741760
SIG0002_20250327190246.wdat	6.3KB	2025-3-27 19:2:46	30741760
SIG0001_20250327180245.wdat	6.3KB	2025-3-27 18:2:45	30741760
SIG0264_20200112200508.wdat	6.3KB	2020-1-12 20:5:8	30742720

Download to default path.

Download path:

From:  
<https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link:  
[https://help.go-ci.com/ruby:quickguide:downloading\\_files\\_from\\_the\\_ruby\\_to\\_rcm](https://help.go-ci.com/ruby:quickguide:downloading_files_from_the_ruby_to_rcm)

Last update: **2025/06/05 15:54**