



Recording Data in the Ruby Mobile App


To record data in the ruby mobile app, connect to a Ruby via **USB**. This will make the **Spectral Analysis** available to use via the main page.

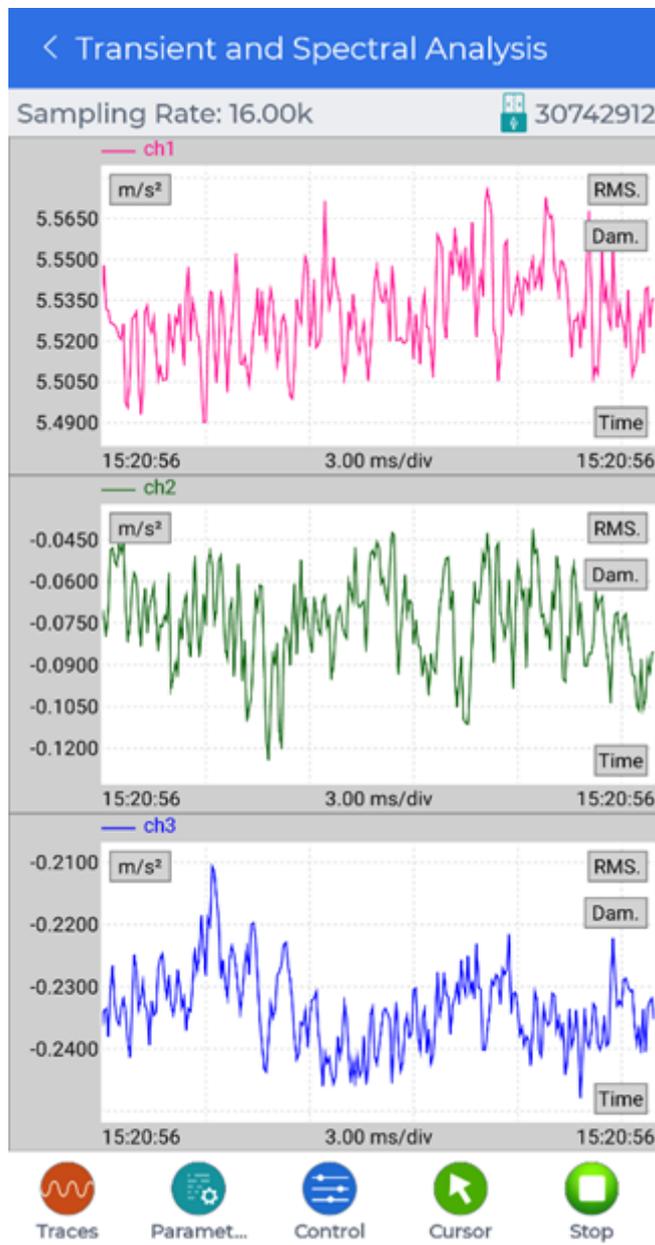

To edit any recording settings, tap the **Parameters** button to open a menu and **slide to the left** to reveal the **Record Setup** button. Tap on the **Record Setup** button to edit what signals to record and how many points or how long to record.

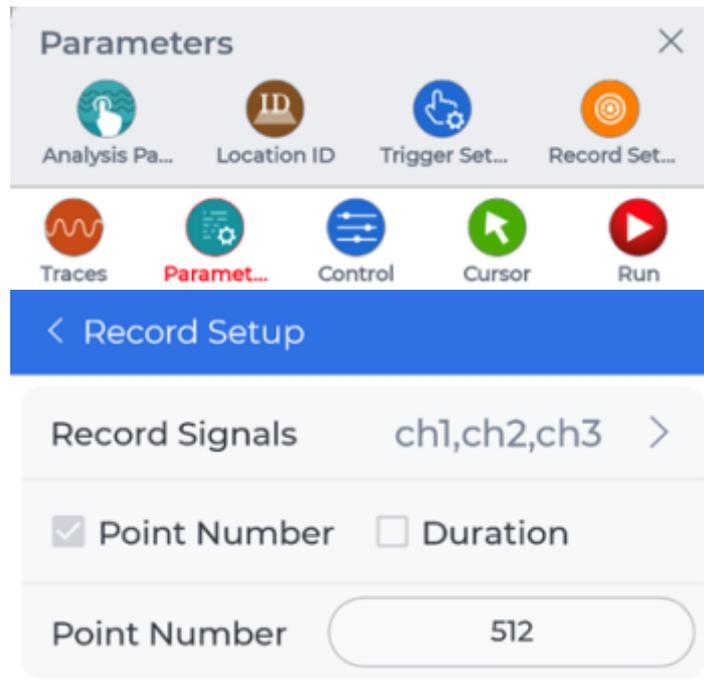

Then tap on the **Control** button to open a menu that contains the **Record** button. Tap the **Record** button to record a signal that will be stored in the Ruby device.

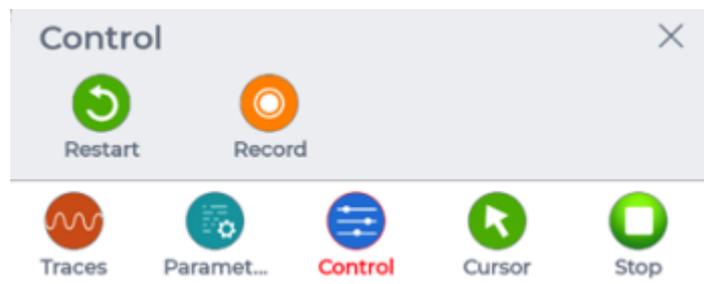

The file will have to be manually downloaded in **Device** > **Files** to view the data.

For more details on viewing or downloading the data, see [Viewing Data in the Ruby Mobile App](#).

From:
<https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link:
https://help.go-ci.com/ruby:quickguide:recording_data_in_the_ruby_mobile_app

Last update: **2025/06/05 17:40**