

## Viewing Data in the Ruby Mobile App


To view the data recorded in the Ruby, connect to it via **Bluetooth** or **USB** then go to **Devices** then **Files**.

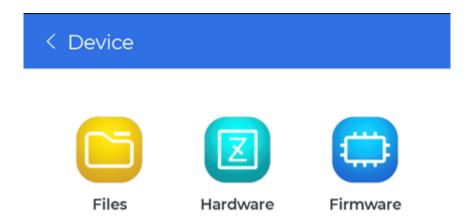

Download the files to the phone by tapping on them. Any files downloaded will be marked by a green check.

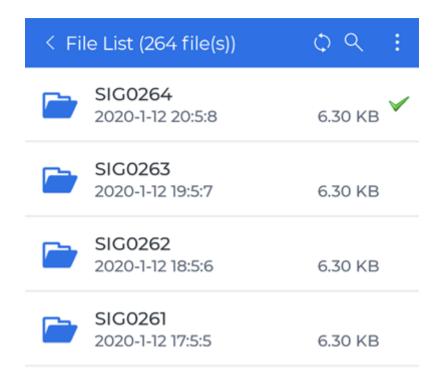

Then the data can be viewed after it is downloaded.

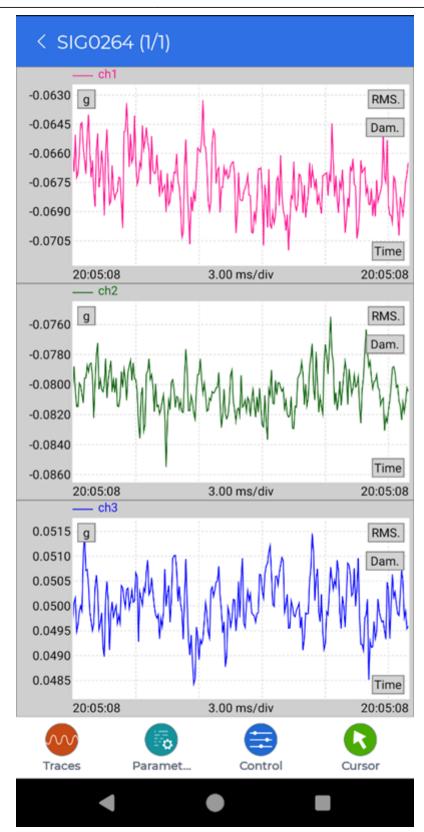

This data can also be viewed later in the **Local Files** page without having to be connected to the Ruby.

https://help.go-ci.com/ Printed on 2025/10/26 18:04

< Local File List (22 file(s))		۹ :
	REC0026 2025-04-25, 18:31:05	12.30 KB
	SIG0006 2025-04-24, 23:07:22	6.30 KB
	SIG0020 2025-03-28, 12:03:03	6.30 KB
	SIG0019 2025-03-28, 11:03:02	6.30 KB
	SIG0018 2025-03-28, 10:03:01	6.30 KB
	SIG0017 2025-03-28, 09:03:00	6.30 KB
	SIG0016 2025-03-28, 08:02:59	6.30 KB
	SIG0015 2025-03-28, 07:03:00	6.30 KB
	SIG0014 2025-03-28, 06:02:57	6.30 KB
	SIG0013	

## From:

https://help.go-ci.com/ - Crystal Instruments Help

## Permanent link:

 $https://help.go-ci.com/ruby:quickguide:viewing\_data\_in\_the\_ruby\_mobile\_app?rev=1749145051$ 

Last update: 2025/06/05 17:37