
Spider Check List

This window allows the user to confirm all the settings and make any last-minute changes. The window has sections for pre-test settings, shaker information, test level and duration information, and input channel configuration. Most of these channels can be edited by clicking on the blue underlined text. There is also a section for adding custom report fields and a test description.

Before you run any test, the Spider checklist will appear. You can also go **Test > Checklist** or **Ctrl+Shift+K** to open the window.

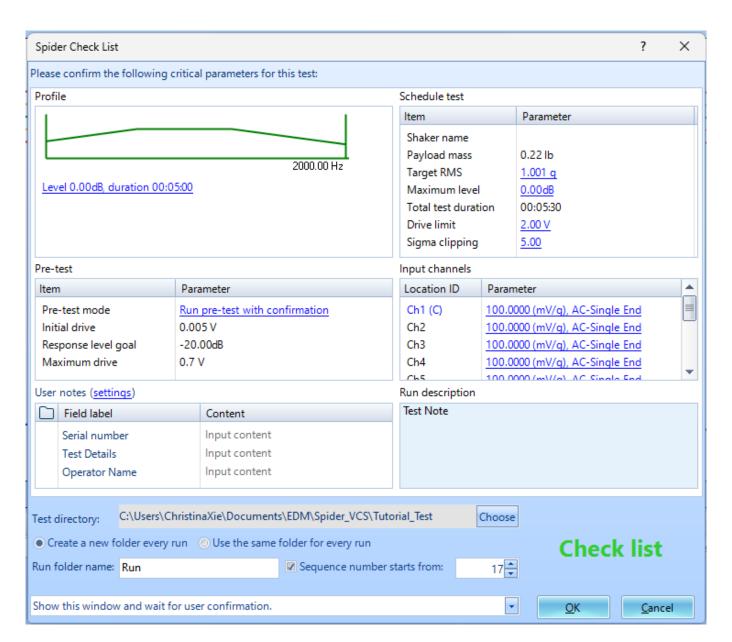

Run Schedule, Test Profile, Pre-test Parameters sections can all be found in the control panel clicking the **Config** button.

Input channels window can be found going to **Setup > Input Channels** or **Ctrl+I**.

User Notes will be found in **Tools > User Notes Settings**. It is where you can input your key data values that you want to include before running. The Field Labels are customizable, so if you have more data values you would like to add, you can click **Insert** and then type in the textbox.

From:

Last update: 2024/12/13 19:40

https://help.go-ci.com/ - Crystal Instruments Help

Permanent link:

https://help.go-ci.com/vcs:spiderchecklist?rev=1734118859

Last update: 2024/12/13 19:40

https://help.go-ci.com/ Printed on 2025/11/23 14:18