


# Loading and Unloading Data from CoCo

The screenshot shows the software interface with a top navigation bar containing 'Review', 'Data Collector', 'Tool', 'Setup', 'System', and 'Off Route'. Below this, there are icons for 'Load' and 'Unload' (highlighted with a red box), 'Param Sets', 'Tacho Sets', 'Sensor Sets', and 'Alarm Sets'. The 'Data Collector' tab is active. Below the icons are 'Devices' and 'Library' sections.

A dialog box titled 'Carrier Vibration Analysis Tool Synchronization Wizard | Database: smart2' is open. It contains the text 'Please select to synchronize with a CoCo device or a folder'. There are two radio button options: 'CoCo device' and 'File folder (Name is CoCo-80)'. The 'File folder' option is selected and highlighted with a red box. Below this is a 'Target Device' section with three radio button options: 'CoCo 80', 'CoCo 70x/80x', and 'Card device'. The 'CoCo 70x/80x' option is selected and highlighted with a red box. A red arrow points from the text 'select correct device type' to the 'CoCo 70x/80x' option. Below the options, it says 'Supported Device Type: Card and Normal' and 'To Sync with a Folder, please click the [Next] button to continue.' At the bottom right, there are buttons for '< Back', 'Next >', and 'Cancel'.

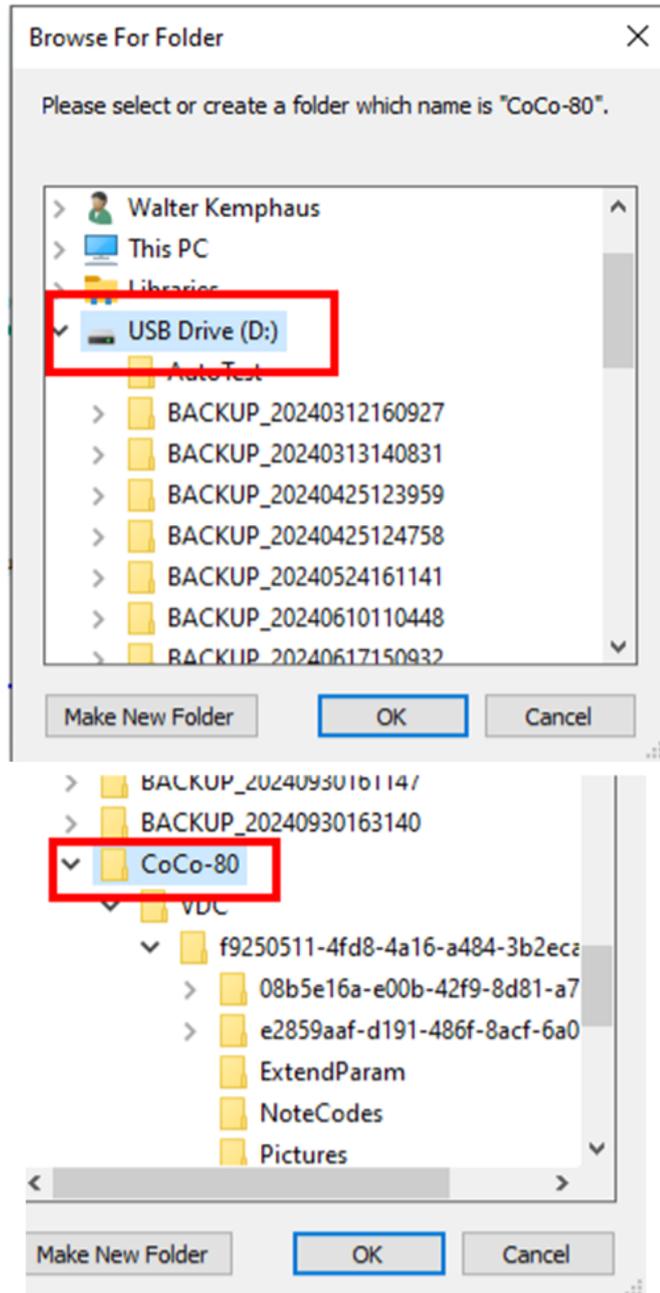

To upload using SD card, in VDS, click **Data Collector** > in the **Devices** menu, click **Load** > Click **File folder (Name is CoCo-80)** > **Select** the Device you are using > Select the card name > Click **Next** > Click the **Browse** button > select the proper path > **choose the folder CoCo-80** > Click **OK**.

To unload, follow the same steps from above after clicking the **Unload** button from the Devices menu.

From:  
<https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link:  
<https://help.go-ci.com/vds:transfer?rev=1734723391>

Last update: **2024/12/20 19:36**

