


Loading and Unloading Data from CoCo

The screenshot shows the main interface of the Carrier Vibration Analysis Tool. The 'Data Collector' tab is active, and the 'Load' and 'Unload' icons are highlighted with a red box. Below this, a 'Carrier Vibration Analysis Tool Synchronization Wizard' dialog is open. The dialog title is 'Carrier Vibration Analysis Tool Synchronization Wizard | Database: smart2'. The main instruction is 'Please select to synchronize with a CoCo device or a folder'. There are two radio button options: 'CoCo device' and 'File folder (Name is CoCo-80)'. The 'File folder' option is selected and highlighted with a red box. Below this, there is a 'Target Device' section with three radio button options: 'CoCo 80', 'CoCo 70x/80x', and 'Card device'. The 'CoCo 70x/80x' option is selected and highlighted with a red box. A red arrow points from the text 'select correct device type' to the 'CoCo 70x/80x' option. At the bottom of the dialog, there are three buttons: '< Back', 'Next >', and 'Cancel'. A green message at the bottom of the dialog reads: 'Supported Device Type: Card and Normal. To Sync with a Folder, please click the [Next] button to continue.'

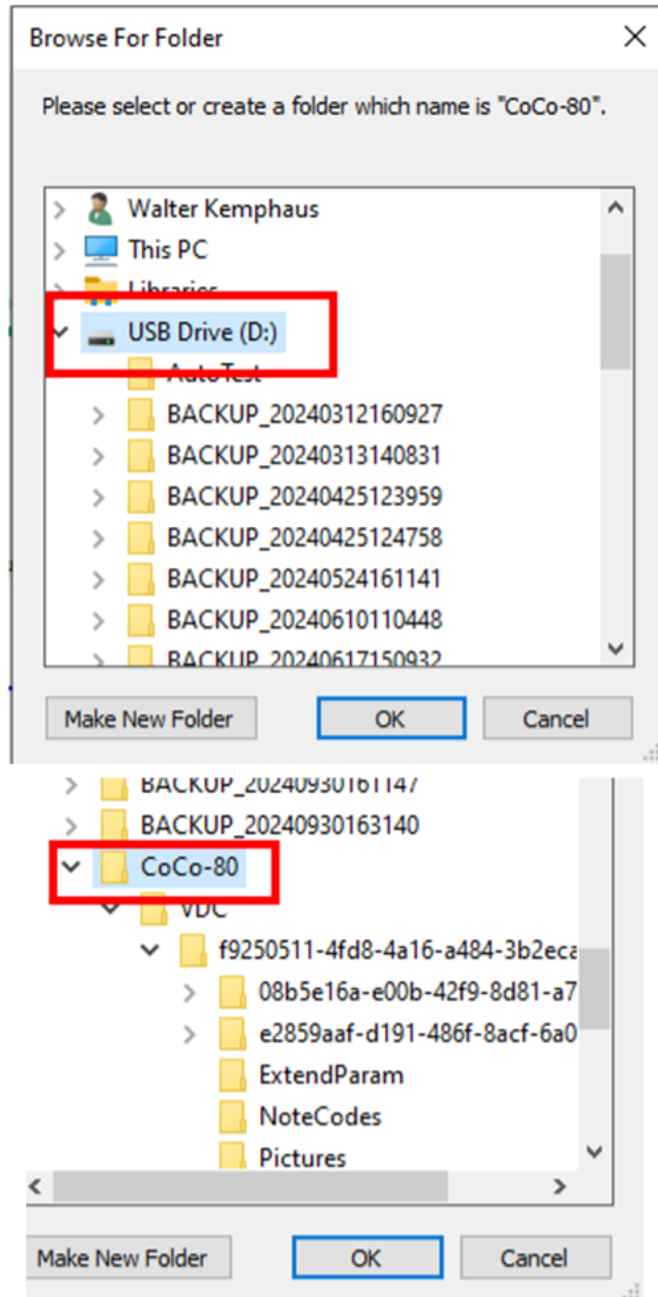

To upload using SD card, in VDS, click **Data Collector** > in the **Devices** menu, click **Load** > Click **File folder (Name is CoCo-80)** > **Select** the Device you are using > Select the card name > Click **Next** > Click the **Browse** button > select the proper path > **choose the folder CoCo-80** > Click **OK**.

To unload, follow the same steps from above after clicking the **Unload** button from the Devices menu.

From:
<https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link:
<https://help.go-ci.com/vds:transfer?rev=1734723391>

Last update: **2024/12/20 19:36**

