


Loading and Unloading Data from CoCo

The screenshot displays the 'Data Collector' tab in the Carrier Vibration Analysis Tool. The 'Load' and 'Unload' icons are highlighted with a red box. Below this, a 'Carrier Vibration Analysis Tool Synchronization Wizard' dialog is open, titled 'Please select to synchronize with a CoCo device or a folder'. The dialog has three radio button options: 'CoCo device', 'File folder (Name is CoCo-80)', and 'Target Device'. The 'File folder' option is selected and highlighted with a red box. A red arrow points from the text 'select correct device type' to the 'CoCo 70x/80x' option under the 'Target Device' section, which is also highlighted with a red box. Below the options, it states 'Supported Device Type: Card and Normal' and 'To Sync with a Folder, please click the [Next] button to continue.' At the bottom right, there are buttons for '< Back', 'Next >', and 'Cancel'.

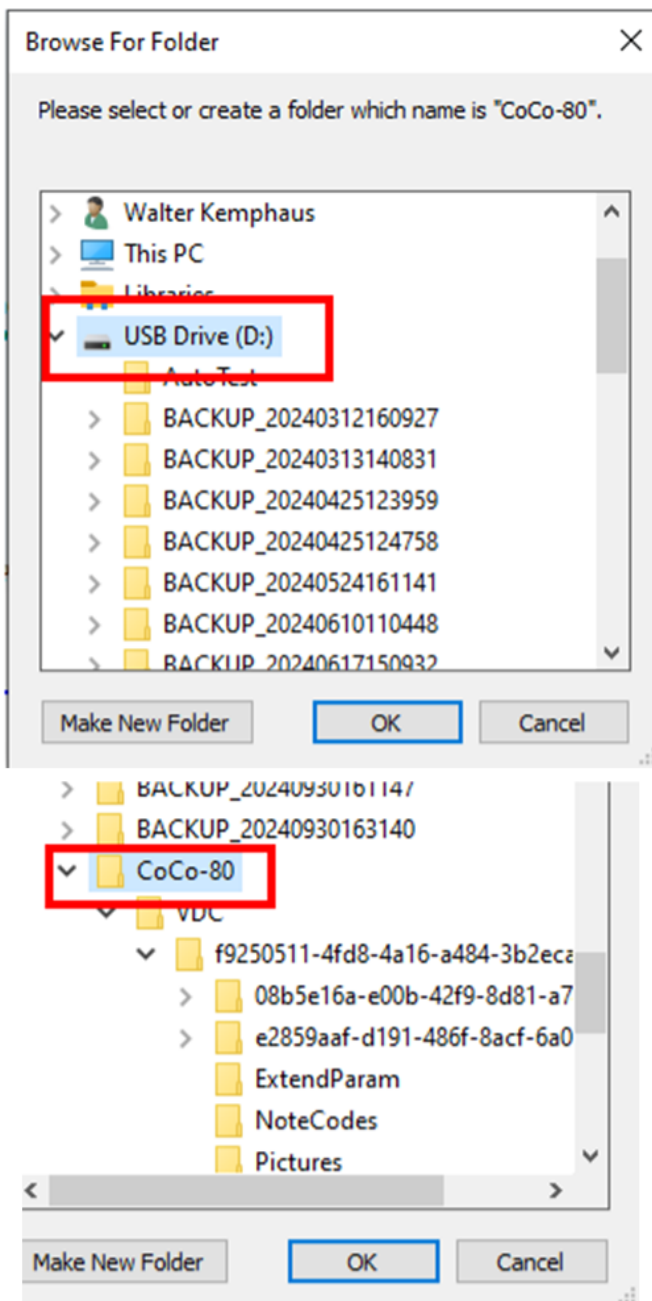

1. First Connect your CoCo device by ethernet to your PC.
2. In VDS, click **Data Collector** > in the **Devices** menu, click **Load** > Click **CoCo device** > **Select the Device you are using** > Click Next > Click **Load Factories and Routes** > Click Next
3. Your VDS will have Factories and Routes to choose to upload to your CoCo device. **Select options to upload** > Click **Upload** > Click **Finish**

From: <https://help.go-ci.com/> - Crystal Instruments Help

Permanent link: <https://help.go-ci.com/vds:transfer?rev=1734725278>

Last update: **2024/12/20 20:07**