

Loading and Unloading Data from CoCo

The image shows the Carrier Vibration Analysis Tool interface. The top navigation bar includes tabs for Review, Data Collector, Tool, Setup, System, and Off Route. The 'Data Collector' tab is active, showing 'Load' and 'Unload' icons highlighted with a red box. Below this are sections for 'Devices' and 'Library' with various tool icons like Param Sets, Tacho Sets, Sensor Sets, and Alarm Sets.

A 'Carrier Vibration Analysis Tool Synchronization Wizard' dialog is open, titled 'Please select to synchronize with a CoCo device or a folder'. The dialog has a 'CoCo' logo and a close button. It contains the following options:


- CoCo device
- File folder (Name is CoCo-80) - This option is highlighted with a red box.

Below these options is a 'Target Device' section with the following options:

- CoCo 80
- CoCo 70x/80x - This option is highlighted with a red box.
- Card device

A red arrow points from the 'File folder' option to the 'CoCo 70x/80x' option, with the text 'select correct device type' written in red above it.

At the bottom of the dialog, there is a green message: 'Supported Device Type: Card and Normal' and 'To Sync with a Folder, please click the [Next] button to continue.' Below this are three buttons: '< Back', 'Next >', and 'Cancel'.

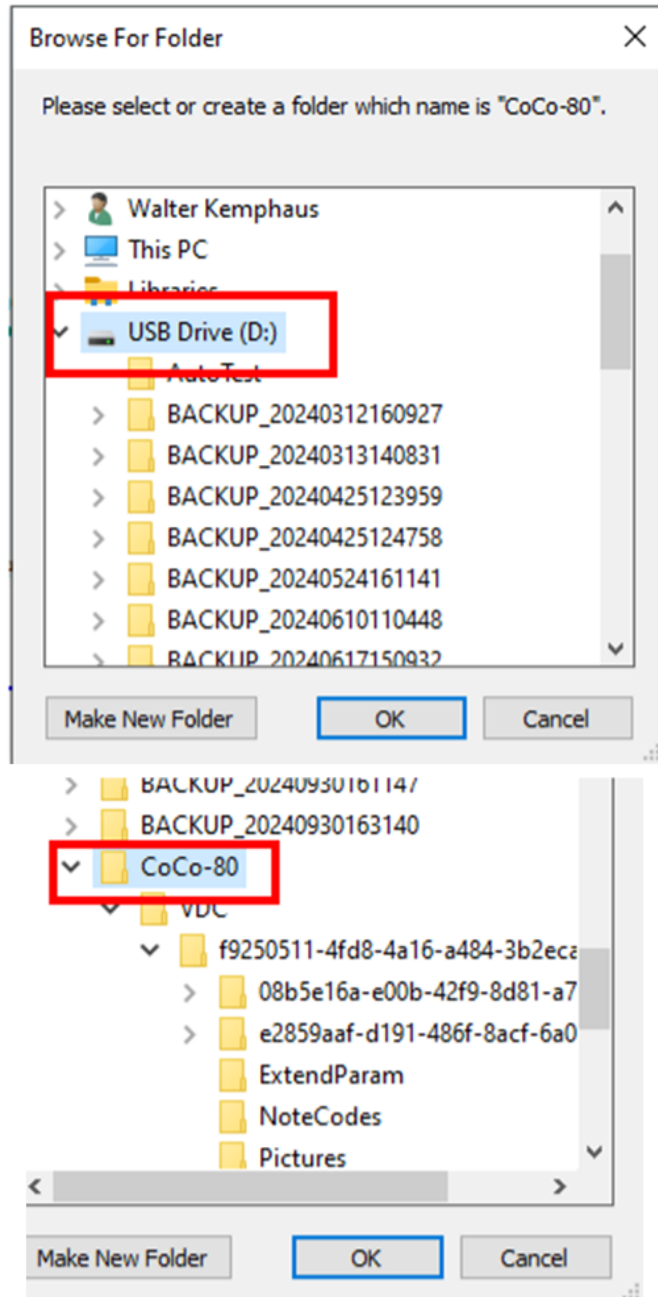

1. First Connect your CoCo device by ethernet to your PC.
2. In VDS, click **Data Collector** > in the **Devices** menu, click **Load** > Click **CoCo device** > **Select the Device you are using** > Click Next > Click **Load Factories and Routes** > Click Next
3. Your VDS will have Factories and Routes to choose to upload to your CoCo device. **Select options to upload** > Click **Upload** > Click **Finish**

From: <https://help.go-ci.com/> - Crystal Instruments Help

Permanent link: <https://help.go-ci.com/vds:transfer?rev=1734725278>

Last update: **2024/12/20 20:07**