


# Loading and Unloading Data from CoCo

The screenshot shows a software interface with a top navigation bar containing tabs: Review, Data Collector, Tool, Setup, System, and Off Route. The 'Data Collector' tab is active, and within it, the 'Load' and 'Unload' buttons are highlighted with a red border. Below these buttons are labels for 'Param Sets', 'Tacho Sets', 'Sensor Sets', and 'Alarm Sets'. The interface is divided into 'Devices' and 'Library' sections.


A dialog box titled 'Vibration Diagnostic System Synchronization Wizard | Database: smart' is open. It features the CoCo logo and the instruction: 'Please select to synchronize with a CoCo device or a folder'. Two radio button options are present: 'CoCo device' (which is selected) and 'File folder (Name is CoCo-80)'. Below the options, it states 'Supported Device Type: All' and provides a green instruction: 'To Sync with a CoCo device, please click the [Next] button to continue.' At the bottom right of the dialog, there are three buttons: '< Back', 'Next >', and 'Cancel'.

Vibration Diagnostic System Synchronization Wizard | Database: smart

 **Please select a CoCo device and click the [Connect] button**

**Please click the [Connect] button to connect with a CoCo device.**

Vibration Diagnostic System Synchronization Wizard | Database: smart


 **Select an option**

What do you want to do?

Load Factories and Routes

Sync Note Codes

Delete Data

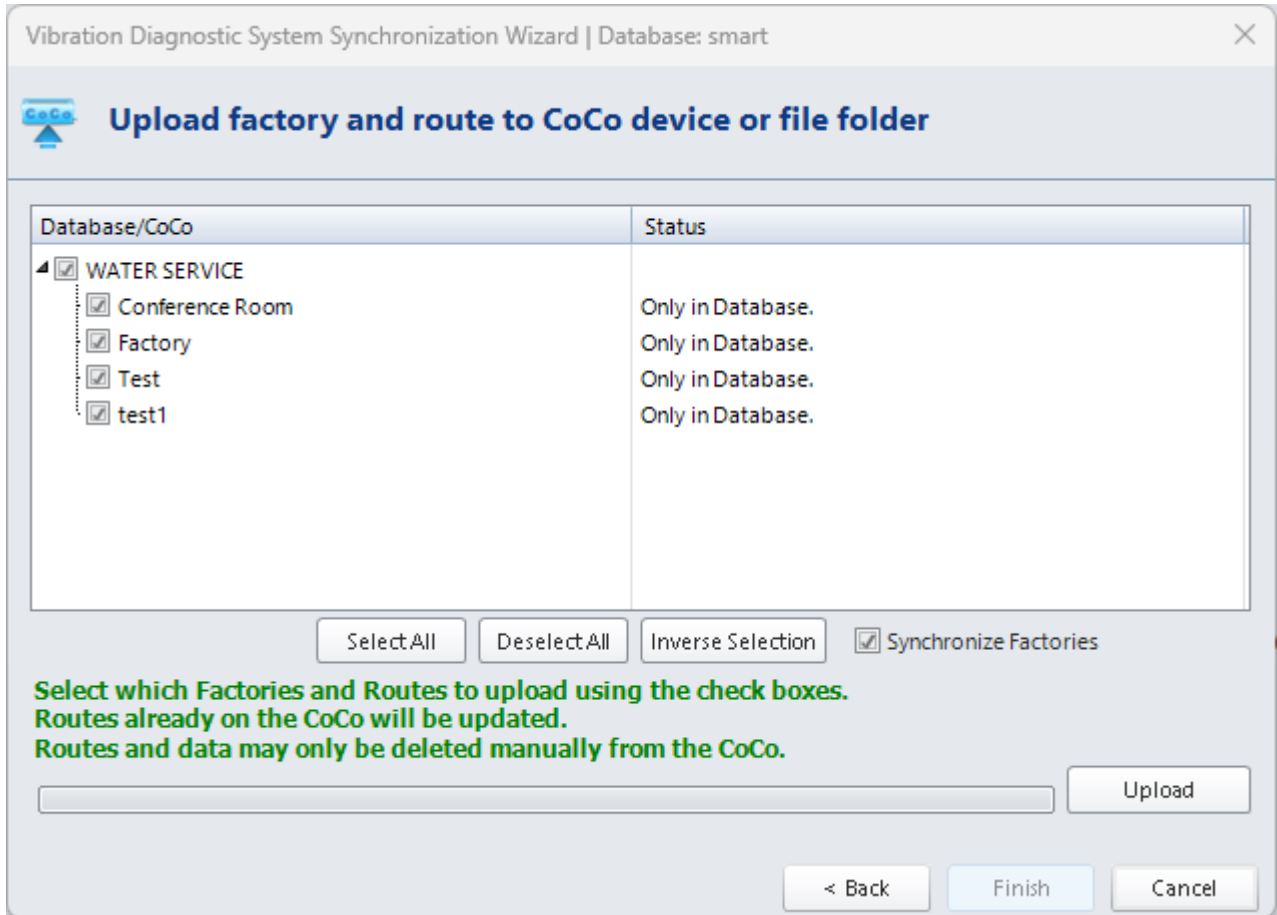

1. First Connect your CoCo device by ethernet to your PC.
2. In VDS, click **Data Collector** > in the **Devices** menu, click **Load** > Click **CoCo device** > **Select the Device you are using** > Click **Next** > Click **Load Factories and Routes** > Click **Next**
3. Your VDS will have Factories and Routes to choose to upload to your CoCo device. **Select options to upload** > Click **Upload** > Click **Finish**

To Unload, follow the same steps from above after clicking **Unload** from the **Devices** menu.

From:

<https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link:

<https://help.go-ci.com/vds:transfer?rev=1734726845>

Last update: **2024/12/20 20:34**