

# Update CoCo via SD Card

The following procedure is applicable to the following CoCo device types: CoCo-70X, CoCo-80X, and CoCo-90X. This update method requires software version 1.3.14 or later.

**Note:** This is considered a ‘Manual Update’. Manual updates are only recommended when no internet connection is available. Updating the CoCo in this manner will delete all CSA files that are stored on the CoCo and replace them with the factory default CSAs. Please backup any CSA files you want saved. It will have no effect on signal data stored on the SD card.

## About bin files


Bin files have a certain naming convention: CoCo80X\_serialNumber\_yyyyMMdd.bin

Regardless of the device type (C70X/80X/90X), the bin file will always use the word “CoCo80X”. The extension will always be .bin. The file name should not be changed. Prior to updating, make sure that the serial number in the bin file matches the CoCo device.

## Step by step instructions

### Place bin file in SD card root folder

Place the bin file in the SD card root directory, and make sure that there is only one .bin file in this directory.

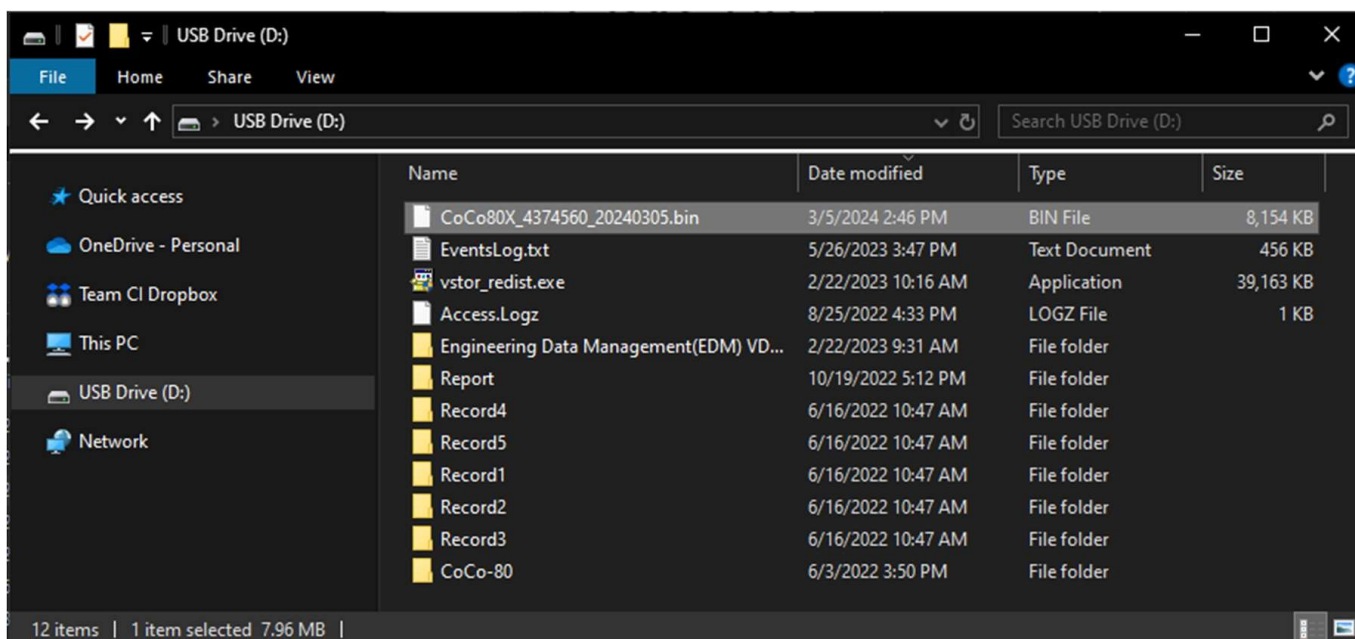


### Log into CoCo and start update


Insert the SD card and boot up the CoCo (in either order is fine). Then from the home screen, navigate to the update button. Note that the Update function has been moved into the About menu in newer

versions (see below):


### Old Version:

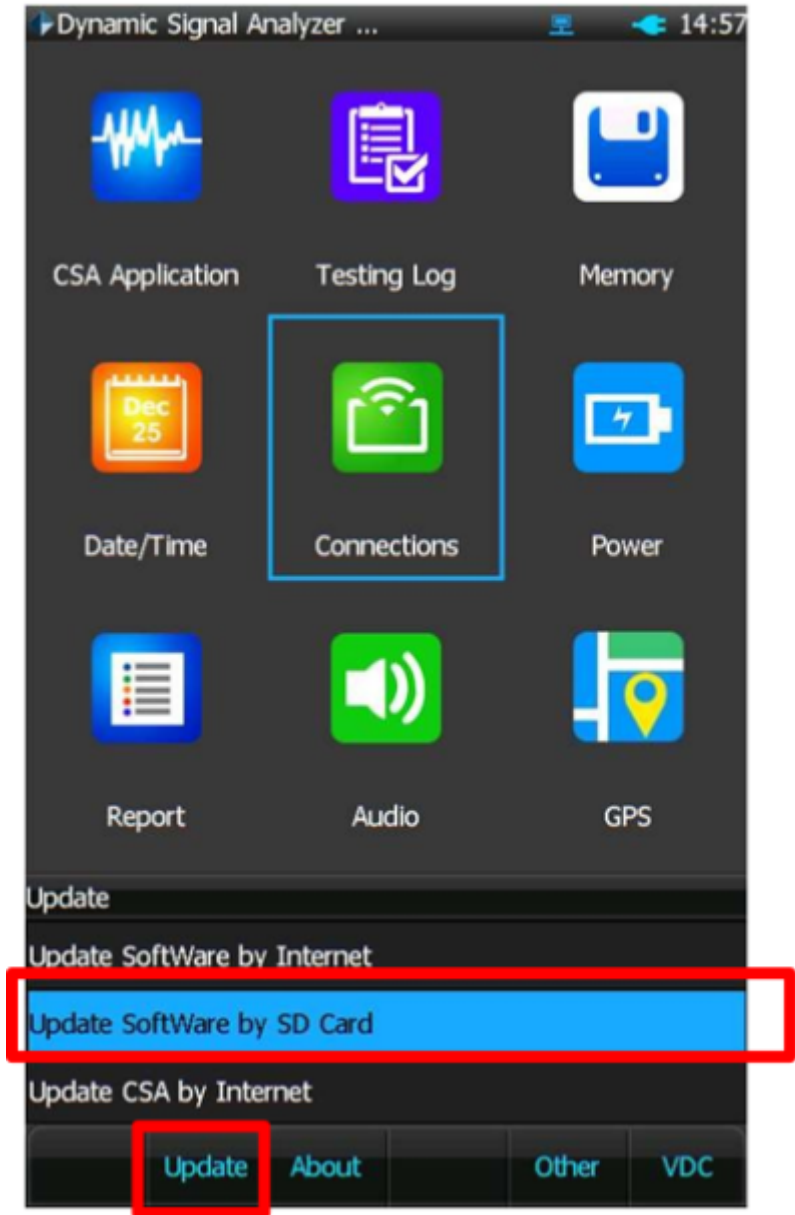

### New Version:

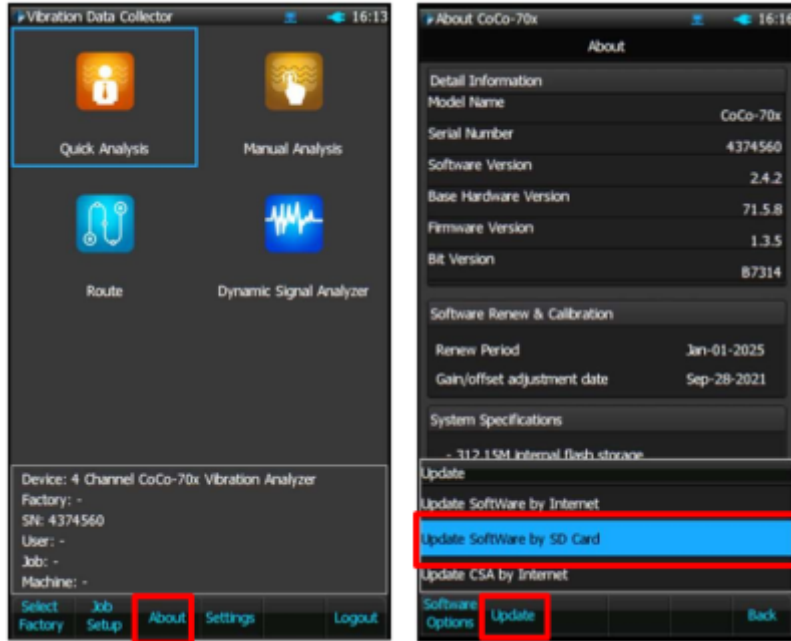

On the following screen, press the Update button (F2). Then when it asks “Retain the old CSA file?”, press “Yes/Keep” (F6)\*

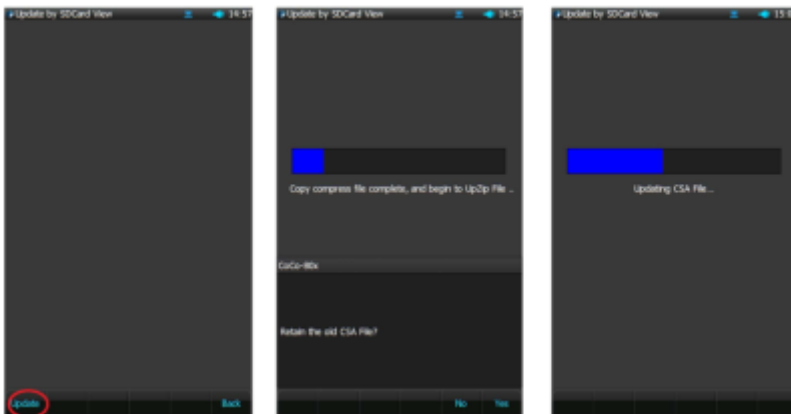

\* It is recommended to choose to keep the old csa files unless the user is trying to restore the default CSAs. Press “Reset/No” to restore all CSAs to the system defaults. This will also erase all custom CSAs, so it is advised that the user backs these up prior to resetting the CSAs.

The device will shut down once the update is finished. To verify that the correct software version was installed, press **Setup** → **F2 (About)**. To check the software options, press **Setup** → **F2 (About)** → **F1 (Software Options)**.

From: <https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link: <https://help.go-ci.com/coco:sdupdate?rev=1733420671>

Last update: **2024/12/05 17:44**