


# VCS Shock Testing

## Create New Test


To create a new test, first open up EDM. On the VCS Start Page, select **Classical Shock** under the **Create a test** tab.



The **New Test Wizard** will now open up. From here, select **Classical Shock** again and then press **Next**.

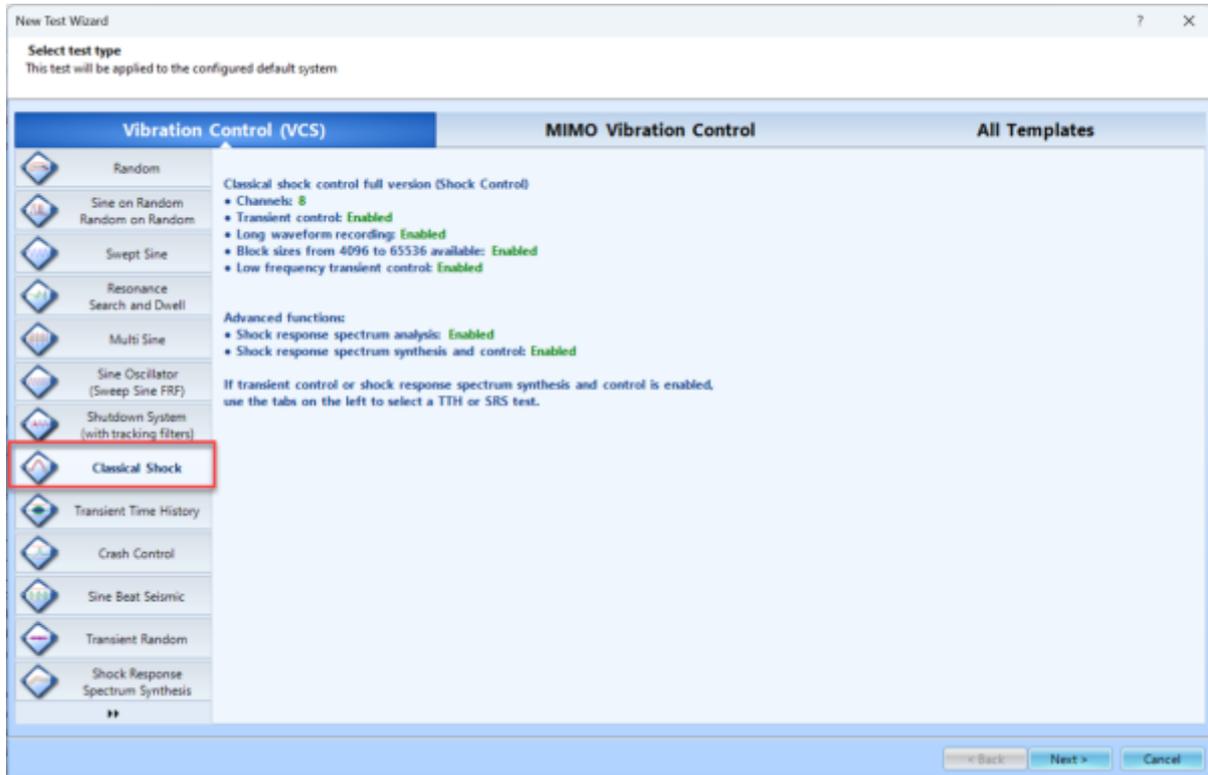


Finally, give the test a name and select the Spider system that will be used to run the test. Once all is complete, press **Create**.

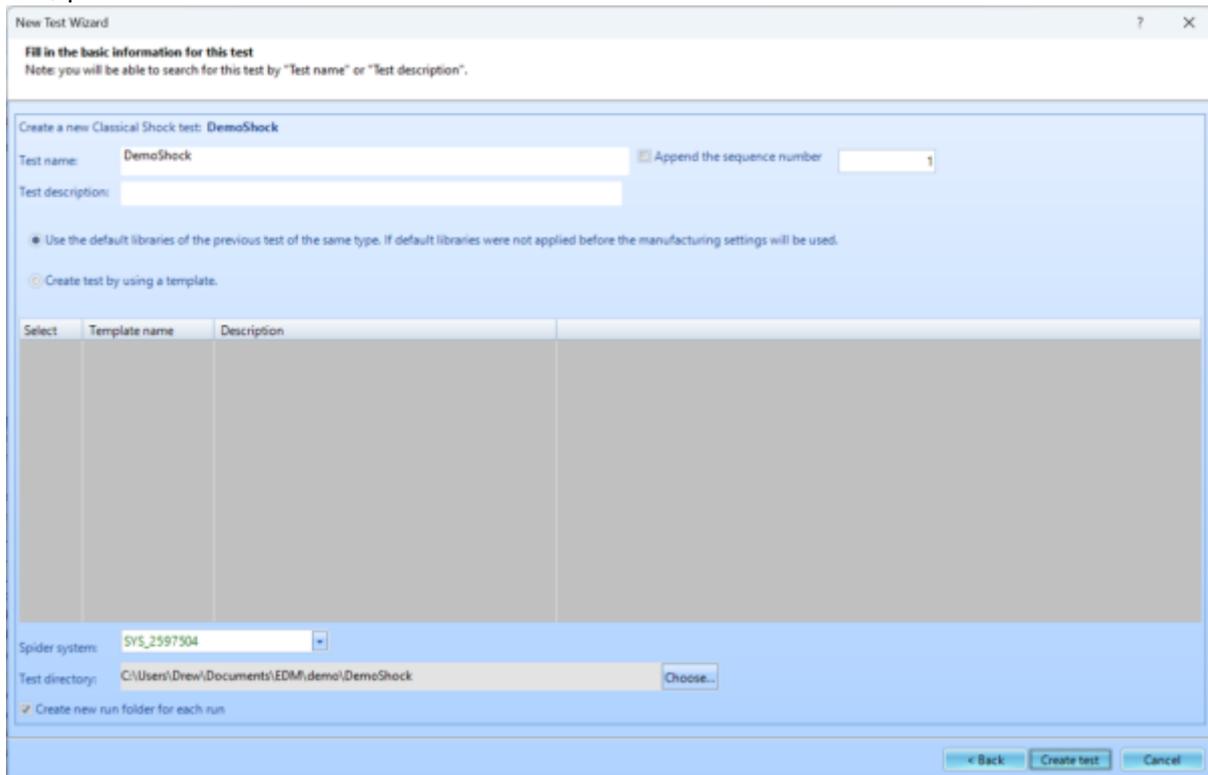


## Test Configuration

The test will now need to be configured to run. This includes inputting information regarding the shaker, creating the schedule for the test to follow, and determining the parameters for the frequency analysis. To access the **Test Configuration** menu, press the **Config** button that can be found on the right side of the screen.

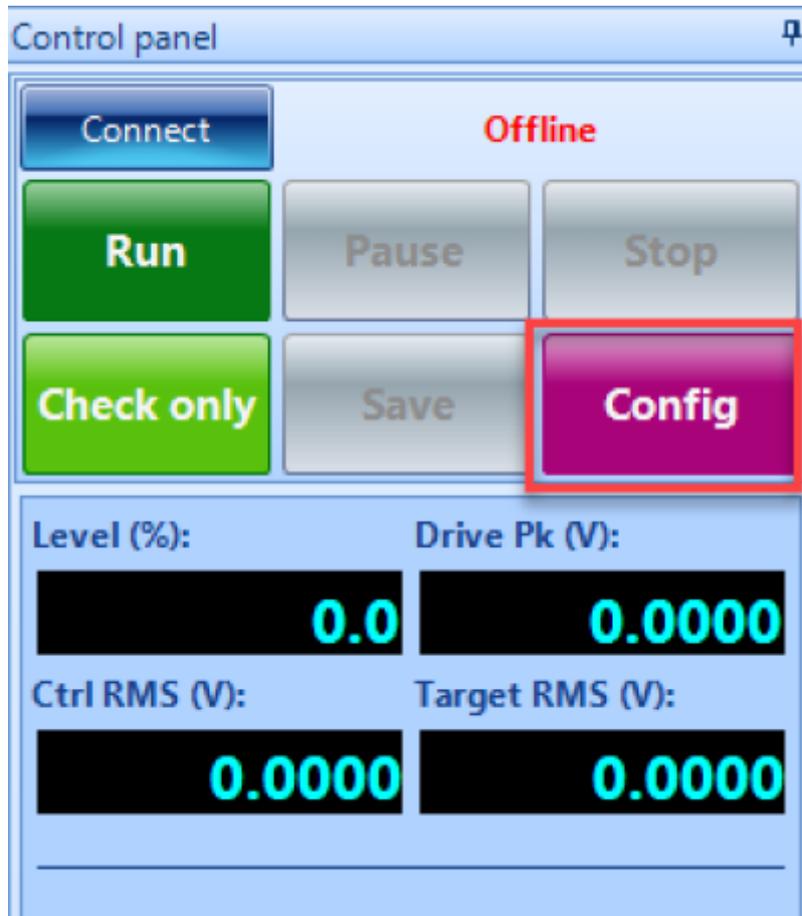

### Shaker Parameters

Click on **Edit Parameters** and enter the information from the shaker specifications. This is important for the safety of the shaker and testing unit.

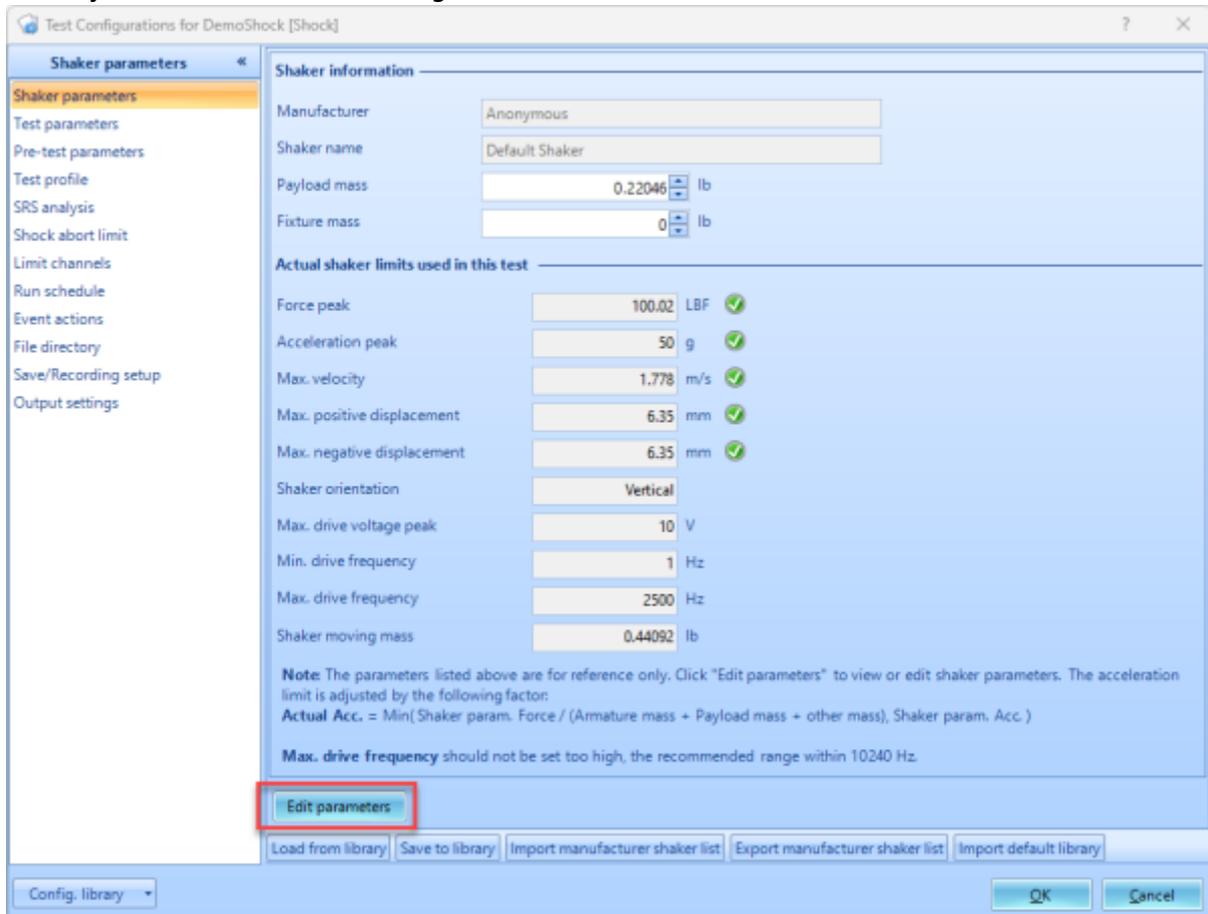

**Shaker Limits** [?] [X]

---

**Shaker details**

Manufacturer:  Shaker name:

---

**Force and acceleration**

Random Max. Force RMS (LBF)	<input type="text" value="100.022"/>	Random Max. Acc. RMS (g)	<input type="text" value="16.66667"/>
Sine Max. Force Peak (LBF)	<input type="text" value="2205.866"/>	Sine Max. Acc. Peak (g)	<input type="text" value="75"/>
Shock Max. Force Peak (LBF)	<input type="text" value="100.022"/>	Shock Max. Acc. Peak (g)	<input type="text" value="50"/>

---

**Displacement**

Max. positive displacement (mm)	<input type="text" value="6.35"/>	Max. negative displacement (mm)	<input type="text" value="6.35"/>
---------------------------------	-----------------------------------	---------------------------------	-----------------------------------

---

**General settings**

Max. drive voltage peak (V)	<input type="text" value="10"/>	Max. velocity (m/s)	<input type="text" value="1.778"/>
Min. drive frequency (Hz)	<input type="text" value="1"/>	Max. drive frequency (Hz)	<input type="text" value="2500"/>
Shaker orientation	<input type="text" value="Vertical"/>		

---


**Shaker moving mass**

Armature mass (lb)	<input type="text" value="0.4409245"/>	Header expander (lb)	<input type="text" value="0"/>
Slip table (lb)	<input type="text" value="0"/>	Drive bar (lb)	<input type="text" value="0"/>


**Note:** the **Payload Mass** can be entered in the shaker parameters page. Actual acceleration limits used in each test will be re-adjusted by following factor:  
**Actual Acc.** = Min(Shaker param. force / (Armature mass + Payload mass + other mass), Shaker param. acc.)  
**Max. drive frequency** should not be set too high, the recommended range within 10240 Hz.

### Test Parameters

The **Test parameters** section in the **Test Configuration** window has settings The analysis parameters, pulse interval, output drive voltage limit, and abort sensitivity settings.

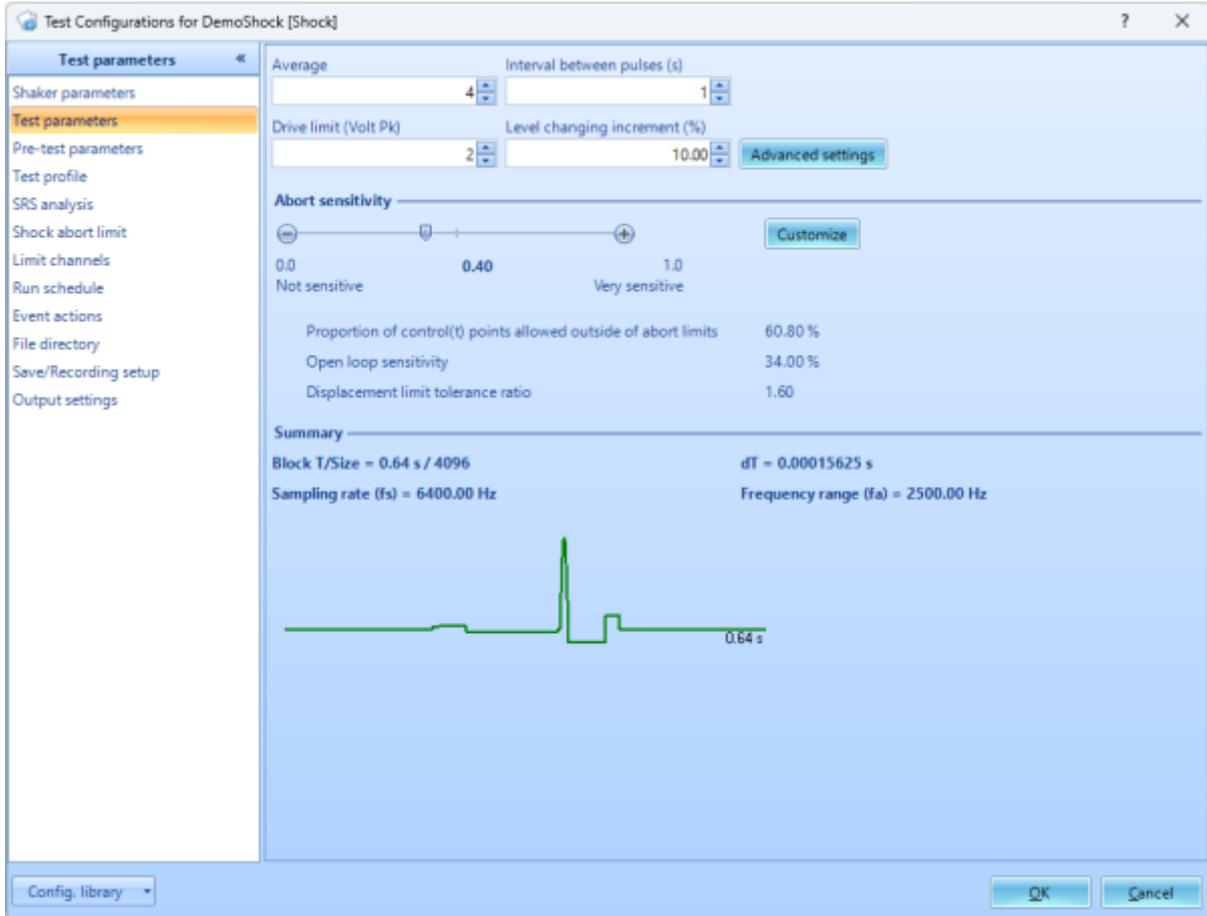


Interval Between Pulses: The time period between successive pulses. The value should be large enough for the system’s response to dampen out after a pulse. It is effective when it is larger than block time.

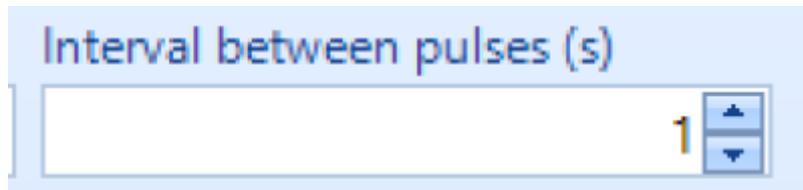


**Test Profile**

The Test Profile page is where the pulse shape and time characteristics are set. The window is divided into three sections: the top shows a plot of the pulse shape in acceleration, velocity, and displacement units. The bottom left has settings for the pulse parameters, and the right has settings for the compensation parameters and comparison to shaker parameters.

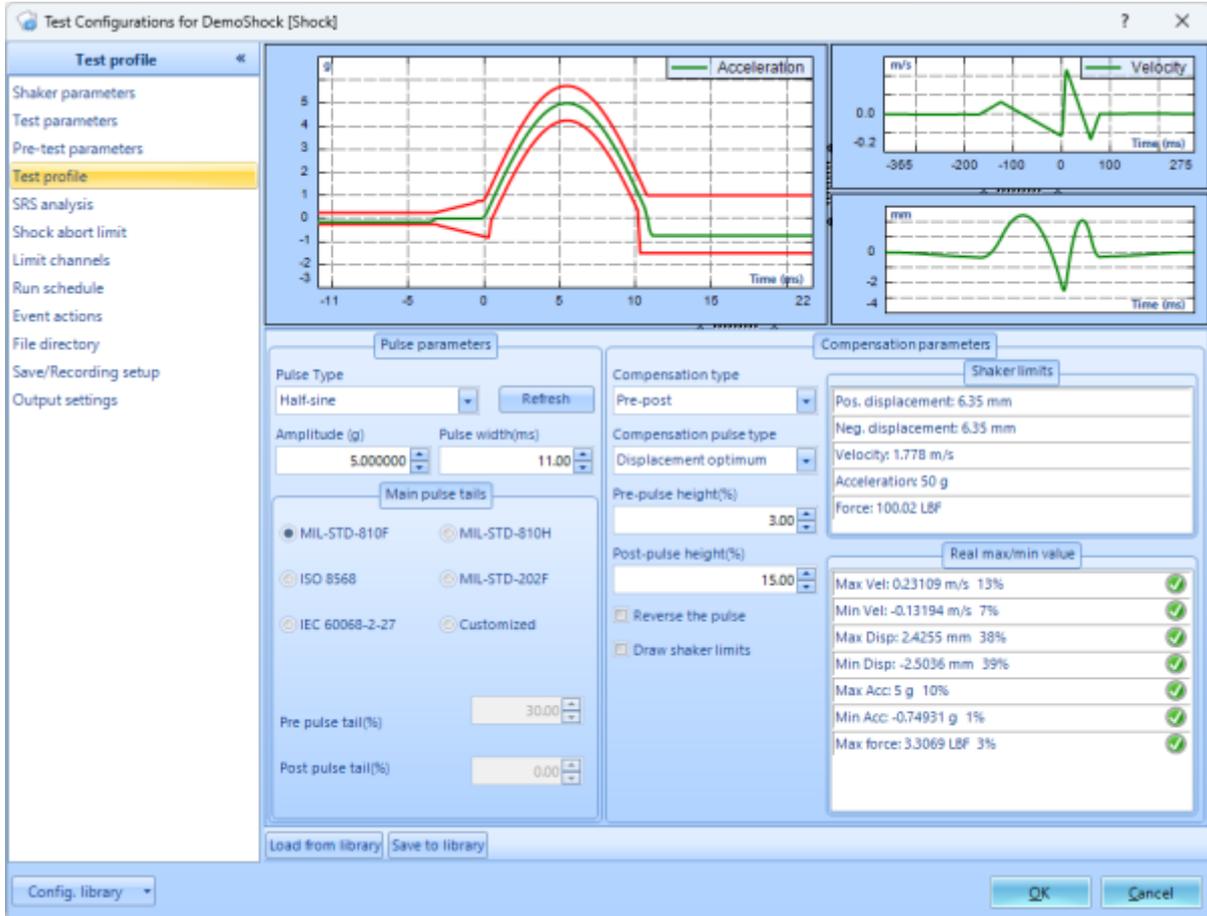

Pulse Type: Pulse Type is the shape of the main pulse. The options are half-sine, terminal-peak sawtooth, initial-peak sawtooth, triangle, rectangle, trapezoid, and haver-sine. The shapes have different frequency characteristics and are suitable for simulated different impulse conditions. Many testing standards specify the MIL-pulse shape to be used.

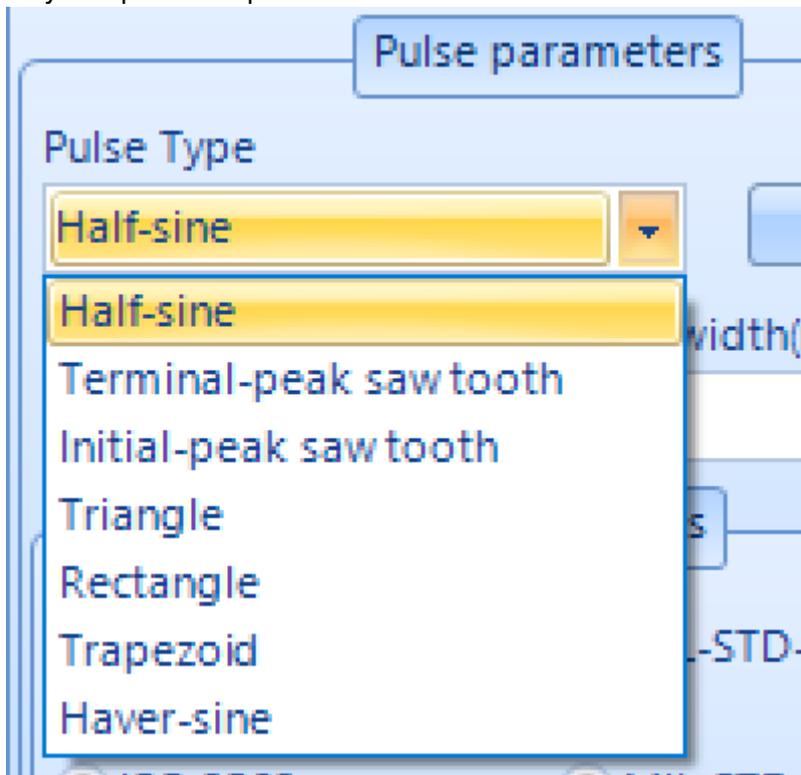

Amplitude/Width: Amplitude sets the peak acceleration value of the pulse. Pulse width sets the width of the pulse in milliseconds. Narrower pulses have greater high-frequency components.

Amplitude (g)	Pulse width(ms)
5.000000	11.00

Pulse Tails: Main pulse tails are the compensation tails described below. The time length of the pre- and post-tails can be set according to five standards: MIL-STD-810, MIL-STD-202F, MIL-STD-810H, the ISO 8568 mechanical shock test standard, and the IEC 60068-2-27 mechanical shock test standard. They can also be set to custom lengths as a percentage of the main pulse width.

Main pulse tails

MIL-STD-810F       MIL-STD-810H

ISO 8568       MIL-STD-202F

IEC 60068-2-27       Customized

Pre pulse tail(%)      30.00

Post pulse tail(%)      0.00

Min/Max Values: Real Max/Min Value table, the characteristics of the pulse are shown and compared with the shaker limits. Each row has an icon that is either green if the associated pulse characteristic is less than 50% of the shaker limit, yellow if is great than 50%, and red if it is 100% or over the limit. Before starting a shock test, all these icons should be green or yellow.


Shaker limits	
Pos. displacement: 6.35 mm	
Neg. displacement: 6.35 mm	
Velocity: 1.778 m/s	
Acceleration: 50 g	
Force: 100.02 LBF	


Real max/min value	
Max Vel: 0.23109 m/s 13%	
Min Vel: -0.13194 m/s 7%	
Max Disp: 2.4255 mm 38%	
Min Disp: -2.5036 mm 39%	
Max Acc: 5 g 10%	
Min Acc: -0.74931 g 1%	
Max force: 3.3069 LBF 3%	

**Run Schedule**

When a test is run, it executes the entries in the run schedule. These entries define test stages at certain levels and durations.

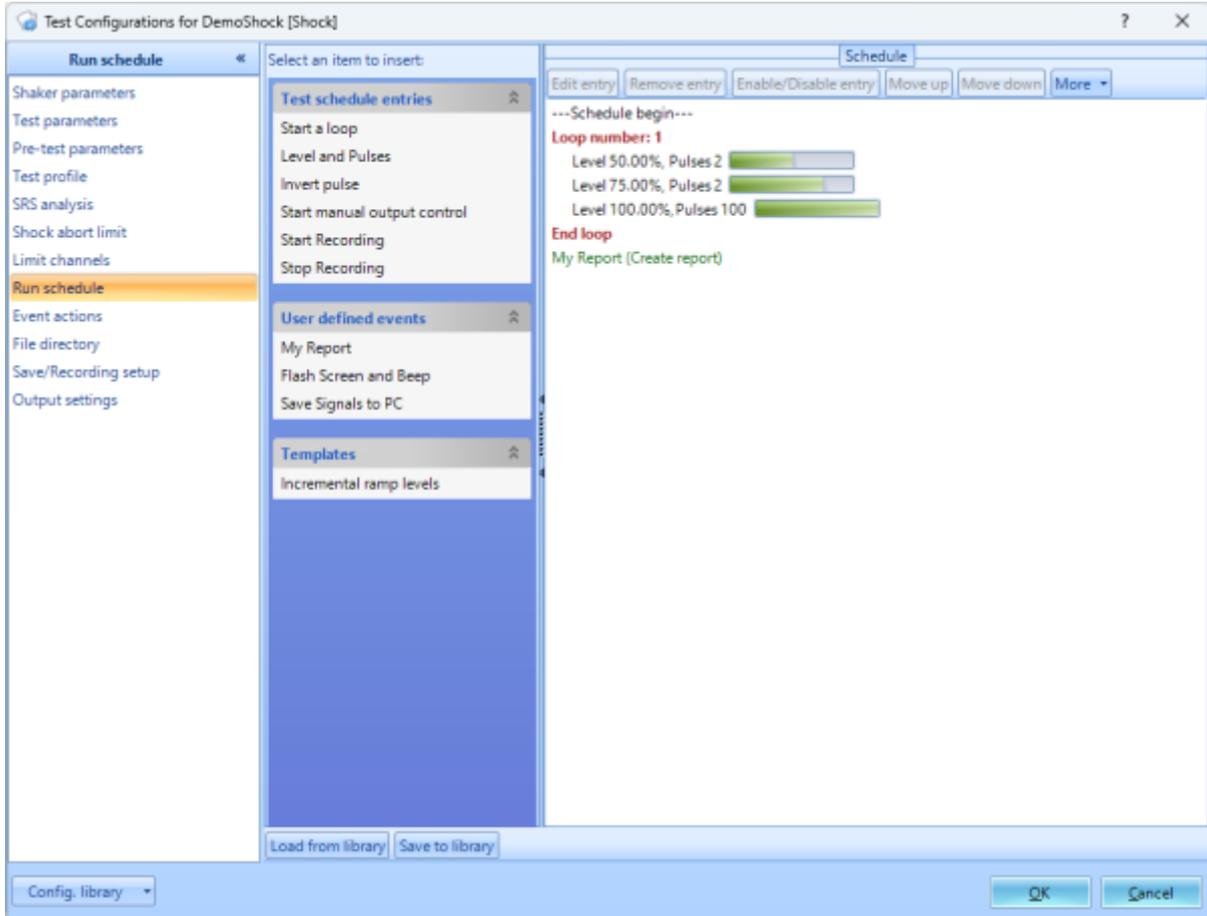


Level and Pulses: Level and Pulses output the set number of pulses at the set level, given in percent.

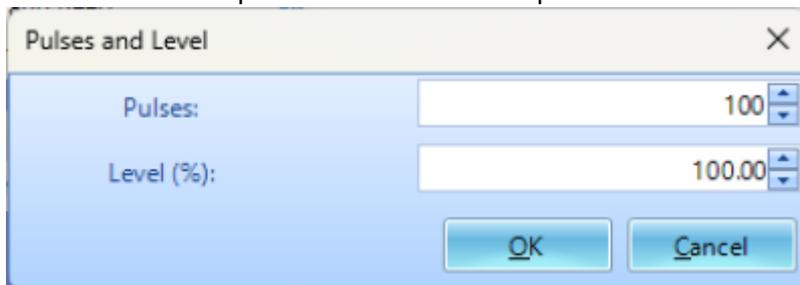

Inverse Pulse: Inverse Pulse will make all subsequent pulses inverted.

## Input Channels

The input channels will now need to be set up. All sensors will to be properly configured before testing. The **Input Channels** menu can be found through **Setup → Input Channels**.

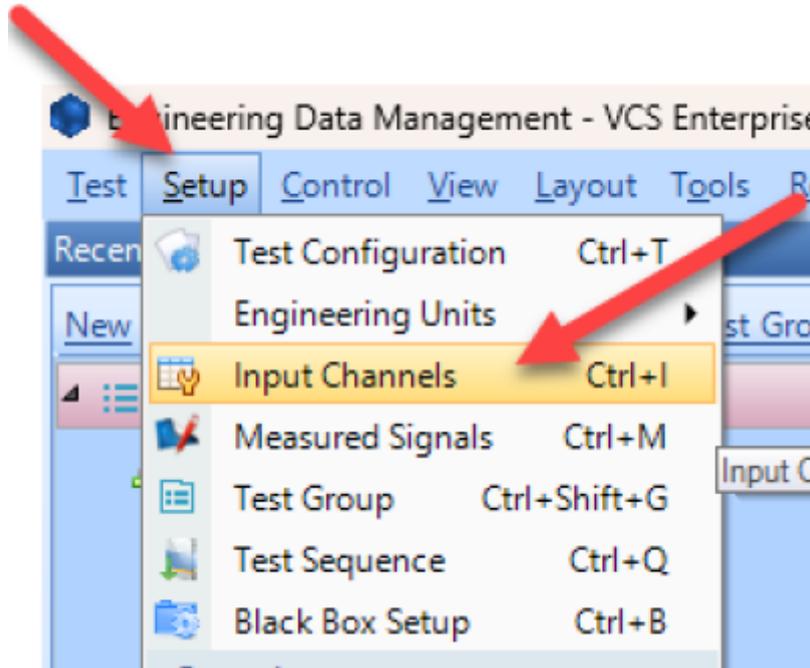


### Channel Type

**Control vs. Monitor.** When running a test, there will need to be at least one control sensor. The control sensor is used to monitor the actual vibration levels that the shaker is producing. It then sends this data to the controller so that it maintains the targeted profile. This sensor should be mounted somewhere on the shaker/slip table itself, not the Device Under Test (DUT). Monitor sensors will show the levels that the DUT itself is experiencing.

On/Off	Channel type	Location ID
<input checked="" type="checkbox"/> On	Control	Ch1
<input checked="" type="checkbox"/> On	Monitor	Ch2
<input type="checkbox"/> Off	Monitor	Ch3
<input type="checkbox"/> Off	Monitor	Ch4
<input type="checkbox"/> Off	Monitor	Ch5
<input type="checkbox"/> Off	Monitor	Ch6
<input type="checkbox"/> Off	Monitor	Ch7
<input type="checkbox"/> Off	Monitor	Ch8

### Measurement Quantity

Defines the physical unit that will be measured by the sensor connected to the channel.

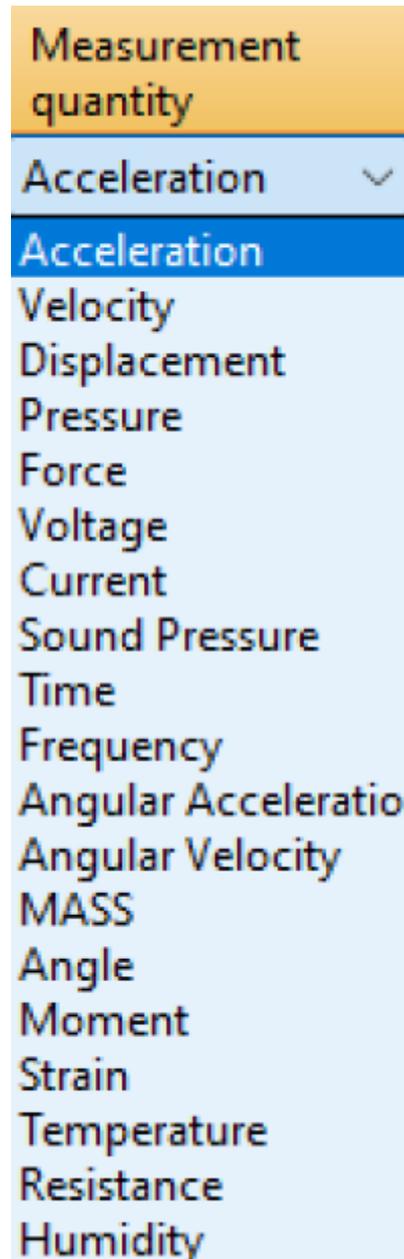

### Sensitivity

Sets the proportionality factor for the measurement (millivolts per engineering unit) given as a parameter of the sensor. **Input Mode**

There are five modes in which the inputs can operate:

*DC-Differential-* In the DC-Differential mode, neither of the input connections is referenced to the local ground. The input is taken as the potential difference between the two input terminals, and any potential in common with both terminals is canceled out. The Common Mode Voltage (CMV) will be rejected as long as the overall input voltage level does not saturate the input gain stage. Beware that very high CMV will cause clipping and may damage the input circuitry. Signals with a nonzero mean (DC component) can be measured in this mode.

*DC-Single End-* In single-ended mode, one of the input terminals is grounded and the input is taken as the potential difference of the center terminal with respect to this ground. Use this mode when the input needs to be grounded to reduce EMI noise or static buildup. Do not use this mode when the signal source is ground referenced or ground loop interference may result. This mode also allows signals with a non-zero mean to be measured.

*AC-Differential-* AC-Differential is a differential input mode that applies a low-frequency high-pass (DC-

blocking) analog filter to the input. It rejects common mode signals and DC components in the input signal. Use this when DC and low-frequency AC voltage measurements are not required or when a DC bias voltage is present. The analog high-pass filter has a cutoff frequency of -3dB at 0.3 Hz, and -0.1dB at 0.7 Hz for the IEPE input mode.

*AC-Single End*- AC-Single End grounds one of the input terminals and enables the DC-blocking analog filter. Use this mode for non-ground referenced sources where measuring the DC or low-frequency components are not required. It shares the same high-pass filter as that of AC-Differential.

*IEPE (ICP)*- All Crystal Instruments products support IEPE (Integral Electronic PiezoElectric) constant current output type input channels. IEPE refers to a class of transducers that are packaged with built-in voltage amplifiers powered by a constant current. These circuits are powered by a 4 mA constant current source at roughly 21 Volts.

*Charge*- Some sensors provide a high-impedance charge output. Usually, these are high-sensitivity piezoelectric units that lack a built-in voltage mode amplifier (i.e. IEPE), allowing them to be used in high-temperature environments. The Spider-81 front-end module has a built-in charge amplifier that allows the system to read the output of these sensors

Sensitivity	Input mode
100 (mV/g)	IEPE
100 (mV/g)	IEPE
100 (mV/g)	IEPE
100 (mV/g)	AC-Single End
100 (mV/g)	DC-Single End
100 (mV/g)	AC-Differential
100 (mV/g)	DC-Differential
100 (mV/g)	In-Line Charge Convert
100 (mV/g)	External Charge Amplifi
100 (mV/g)	External Charge Amplifi
100 (mV/g)	AC-Single End

### Running the Test

Now that all of the parameters for the test have been setup, the test is ready to run. Here are the final steps to start the test.

1. Press the **Connect** button to connect to the controller.
2. Press the **Run** button.
3. The **Spider Check List** will now appear. Here you can check the settings of the test and verify that all is set up properly. Press **Start** once this has been verified.
4. The Pre-Test will now begin. This will verify that the control loop is properly established and provide data that the control loop needs.
5. The test is now running

From:  
<https://help.go-ci.com/> - **Crystal Instruments Help**

Permanent link:  
<https://help.go-ci.com/vcs:shock?rev=1714752082>

Last update: **2024/05/03 16:01**